

OPC 10000-16

OPC Unified Architecture Part 16: State Machines

Release 1.05.04

2024-10-15

Specification Type:	<u>Industry Standard Specification</u>	Comments:	Report or view errata: http://www.opcfoundation.org/errata
Document Number	OPC 10000-16		
Title:	OPC Unified Architecture	Date:	2024-10-15
	<u>Part 16: State Machines</u>		
Version:	<u>Release 1.05.04</u>	Software:	MS-Word
		Source:	OPC 10000-16 - UA Specification Part 16 - State Machines 1.05.04.docx
Author:	<u>OPC Foundation</u>	Status:	<u>Release</u>

CONTENTS

FIGURES	iii
TABLES	iii
1 Scope	1
2 Normative references	1
3 Terms, definitions, abbreviated terms and conventions	1
3.1 Terms and definitions	1
4 State Machine Model	1
4.1 General	1
4.2 Examples of finite state machines	2
4.2.1 Simple state machine	2
4.2.2 State machine containing substates	3
4.3 Definition of state machine	3
4.4 Representation of state machines in the AddressSpace	4
4.4.1 Overview	4
4.4.2 StateMachineType	5
4.4.3 StateVariableType	6
4.4.4 DescriptionNodeIdDataType	7
4.4.5 TransitionVariableType	7
4.4.6 FiniteStateMachineType	8
4.4.7 FiniteStateVariableType	10
4.4.8 FiniteTransitionVariableType	11
4.4.9 StateType	11
4.4.10 InitialStateType	12
4.4.11 TransitionType	13
4.4.12 FromState	13
4.4.13 ToState	14
4.4.14 HasCause	14
4.4.15 HasEffect	14
4.4.16 HasSubStateMachine	15
4.4.17 TransitionEventType	15
4.4.18 AuditUpdateStateEventType	16
4.4.19 Special Restrictions on subtyping StateMachines	16
4.4.20 Specific StatusCodes for StateMachines	17
4.5 Examples of StateMachines in the AddressSpace	18
4.5.1 StateMachineType using inheritance	18
4.5.2 StateMachineType with a SubStateMachine using inheritance	19
4.5.3 StateMachineType using containment	20
4.5.4 Example of a StateMachine having Transition to SubStateMachine	21
4.5.5 Example of a StateMachine adding a SubStateMachine on a Subtype	22
4.6 StateMachine Extensions for ChoiceStates and Guards	24
4.6.1 Overview	24
4.6.2 ChoiceStateType	25
4.6.3 HasGuard	25
4.6.4 GuardVariableType	26
4.6.5 ExpressionGuardVariableType	26

4.6.6	ElseGuardVariableType	27
4.7	Example of a StateMachine using a ChoiceState and Guards	27

FIGURES

Figure 1	– Example of a simple state machine.....	2
Figure 2	– Example of a state machine having a sub-machine.....	3
Figure 3	– The StateMachine Information Model.....	5
Figure 4	– Example of a FiniteStateMachine type	10
Figure 5	– Example of a FiniteStateMachine instance	10
Figure 6	– Example of an initial State in a sub-machine	12
Figure 7	– Example of a StateMachineType using inheritance	18
Figure 8	– Example of a StateMachineType with a SubStateMachine using inheritance	19
Figure 9	– Example of a StateMachineType using containment	20
Figure 10	– Example of a StateMachine with Transitions from sub-states.....	21
Figure 11	– Example of a StateMachineType having Transition to SubStateMachine	22
Figure 12	– Example of a StateMachine with two States.....	23
Figure 13	– Example of a StateMachine extended with two Substates	23
Figure 14	– Example of a StateMachine extended with another two Substates	23
Figure 15	– Example of a StateMachineType adding SubStateMachines in Subtypes	24
Figure 16	– Example of a ChoiceState	25
Figure 17	– Example of a StateMachine using ChoiceState and Guards	28

TABLES

Table 1	– StateMachineType definition	6
Table 2	– StateVariableType definition	6
Table 3	– DescriptionNodeIdDataType Structure	7
Table 4	– DescriptionNodeIdDataType Definition.....	7
Table 5	– TransitionVariableType definition	8
Table 6	– FiniteStateMachineType definition	9
Table 7	– FiniteStateVariableType definition	11
Table 8	– FiniteTransitionVariableType definition	11
Table 9	– StateType definition	12
Table 10	– InitialStateType definition	13
Table 11	– TransitionType definition.....	13
Table 12	– FromState ReferenceType	13
Table 13	– ToState ReferenceType	14
Table 14	– HasCause ReferenceType	14
Table 15	– HasEffect ReferenceType	15
Table 16	– HasSubStateMachine ReferenceType	15
Table 17	– TransitionEventType	16
Table 18	– AuditUpdateStateEventType	16

Table 19 – Specific StatusCodes for StateMachines	17
Table 20 – ChoiceStateType	25
Table 21 – HasGuard ReferenceType.....	26
Table 22 – GuardVariableType definition.....	26
Table 23 – ExpressionGuardVariableType definition.....	27
Table 24 – ElseGuardVariableType definition	27

OPC FOUNDATION

UNIFIED ARCHITECTURE –

FOREWORD

This specification is the specification for developers of OPC UA applications. The specification is a result of an analysis and design process to develop a standard interface to facilitate the development of applications by multiple vendors that shall inter-operate seamlessly together.

Copyright © 2006-2024, OPC Foundation, Inc.

AGREEMENT OF USE

COPYRIGHT RESTRICTIONS

Any unauthorized use of this specification may violate copyright laws, trademark laws, and communications regulations and statutes. This document contains information which is protected by copyright. All Rights Reserved. No part of this work covered by copyright herein may be reproduced or used in any form or by any means--graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems--without permission of the copyright owner.

OPC Foundation members and non-members are prohibited from copying and redistributing this specification. All copies must be obtained on an individual basis, directly from the OPC Foundation Web site <http://www.opcfoundation.org>.

PATENTS

The attention of adopters is directed to the possibility that compliance with or adoption of OPC specifications may require use of an invention covered by patent rights. OPC shall not be responsible for identifying patents for which a license may be required by any OPC specification, or for conducting legal inquiries into the legal validity or scope of those patents that are brought to its attention. OPC specifications are prospective and advisory only. Prospective users are responsible for protecting themselves against liability for infringement of patents.

WARRANTY AND LIABILITY DISCLAIMERS

WHILE THIS PUBLICATION IS BELIEVED TO BE ACCURATE, IT IS PROVIDED "AS IS" AND MAY CONTAIN ERRORS OR MISPRINTS. THE OPC FOUNDATION MAKES NO WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, WITH REGARD TO THIS PUBLICATION, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF TITLE OR OWNERSHIP, IMPLIED WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR USE. IN NO EVENT SHALL THE OPC FOUNDATION BE LIABLE FOR ERRORS CONTAINED HEREIN OR FOR DIRECT, INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL, RELIANCE OR COVER DAMAGES, INCLUDING LOSS OF PROFITS, REVENUE, DATA OR USE, INCURRED BY ANY USER OR ANY THIRD PARTY IN CONNECTION WITH THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

The entire risk as to the quality and performance of software developed using this specification is borne by you.

RESTRICTED RIGHTS LEGEND

This Specification is provided with Restricted Rights. Use, duplication or disclosure by the U.S. government is subject to restrictions as set forth in (a) this Agreement pursuant to DFARs 227.7202-3(a); (b) subparagraph (c)(1)(i) of the Rights in Technical Data and Computer Software clause at DFARs 252.227-7013; or (c) the Commercial Computer Software Restricted Rights clause at FAR 52.227-19 subdivision (c)(1) and (2), as applicable. Contractor / manufacturer are the OPC Foundation, 16101 N. 82nd Street, Suite 3B, Scottsdale, AZ, 85260-1830.

COMPLIANCE

The OPC Foundation shall at all times be the sole entity that may authorize developers, suppliers and sellers of hardware and software to use certification marks, trademarks or other special designations to indicate compliance with these materials. Products developed using this specification may claim compliance or conformance with this specification if and only if the software satisfactorily meets the certification requirements set by the OPC Foundation. Products that do not meet these requirements may claim only that the product was based on this specification and must not claim compliance or conformance with this specification.

TRADEMARKS

Most computer and software brand names have trademarks or registered trademarks. The individual trademarks have not been listed here.

GENERAL PROVISIONS

Should any provision of this Agreement be held to be void, invalid, unenforceable or illegal by a court, the validity and enforceability of the other provisions shall not be affected thereby.

This Agreement shall be governed by and construed under the laws of the State of Minnesota, excluding its choice of law rules.

This Agreement embodies the entire understanding between the parties with respect to, and supersedes any prior understanding or agreement (oral or written) relating to, this specification.

ISSUE REPORTING

The OPC Foundation strives to maintain the highest quality standards for its published specifications, hence they undergo constant review and refinement. Readers are encouraged to report any issues and view any existing errata here: <http://www.opcfoundation.org/errata>

Revision 1.05.04 Highlights

The following table includes the Mantis issues resolved with this revision.

Mantis ID	Scope	Summary	Resolution
9225	Feature	Extend StateVariableType with additional information	Added optional Properties to StateVariableType (see 4.4.3) and created new DataType (see 4.4.4).

OPC Unified Architecture Specification

Part 16: State Machines

1 Scope

This part of the OPC Unified Architecture defines an Information Model. The Information Model describes the basic infrastructure to model state machines.

2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments and errata) applies.

OPC 10000-1, *OPC Unified Architecture - Part 1: Concepts*

<http://www.opcfoundation.org/UA/Part1/>

OPC 10000-3, *OPC Unified Architecture - Part 3: Address Space Model*

<http://www.opcfoundation.org/UA/Part3/>

OPC 10000-4, *OPC Unified Architecture - Part 4: Services*

<http://www.opcfoundation.org/UA/Part4/>

OPC 10000-5, *OPC Unified Architecture - Part 5: Information Model*

<http://www.opcfoundation.org/UA/Part5/>

OPC 10000-6, *OPC Unified Architecture - Part 6: Mappings*

<http://www.opcfoundation.org/UA/Part6/>

OPC 10000-7, *OPC Unified Architecture - Part 7: Profiles*

<http://www.opcfoundation.org/UA/Part7/>

OPC 10000-9, *OPC Unified Architecture - Part 9: Alarms and conditions*

<http://www.opcfoundation.org/UA/Part9/>

OPC 10000-10, *OPC Unified Architecture - Part 10: Programs*

<http://www.opcfoundation.org/UA/Part10/>

3 Terms, definitions, abbreviated terms and conventions

3.1 Terms and definitions

For the purposes of this document, the terms and definitions given in OPC 10000-1, OPC 10000-3, and OPC 10000-5 apply.

4 State Machine Model

4.1 General

This document describes the basic infrastructure to model state machines. It defines *ObjectTypes*, *VariableTypes* and *ReferenceTypes* and explains how they should be used.

This document is an integral part of this standard, that is, the types defined in this document shall be used as defined. However, it is not required but strongly recommended that a *Server*

uses these types to expose its state machines. The defined types may be subtyped to refine their behaviour.

When a *Server* exposes its state machine using the types defined in this document, it might only provide a simplified view on its internal state machine, hiding for example substates or putting several internal states into one exposed state.

The scope of the state machines described in this document is to provide an appropriate foundation for state machines needed for OPC 10000-9 and OPC 10000-10. It does not provide more complex functionality of a state machine like parallel states, forks and joins, history states, choices and junctions, etc. However, the base state machine defined in this document can be extended to support such concepts.

The following clauses describe examples of state machines, define state machines in the context of this document and define the representation of state machines in OPC UA. Finally, some examples of state machines, represented in OPC UA, are given.

4.2 Examples of finite state machines

4.2.1 Simple state machine

The following example provides an overview of the base features that the state machines defined in this specification will support. In the following, a more complex example is given, that also supports sub-state machines.

Figure 1 gives an overview over a simple state machine. It contains the three states "State1", "State2" and "State3". There are transitions from "State1" to "State2", "State2" to "State2", etc. Some of the transitions provide additional information with regard to what causes (or triggers) the transition, for example the call of "Method1" for the transition from "State1" to "State2". The effect (or action) of the transition can also be specified, for example the generation of an *Event* of the "EventType1" in the same transition. The notation used to identify the cause is simply listing it on the transition, the effect is prefixed with a "/". More than one cause or effect are separated by a ",". Not every transition has to have a cause or effect, for example the transition between "State2" and "State3".

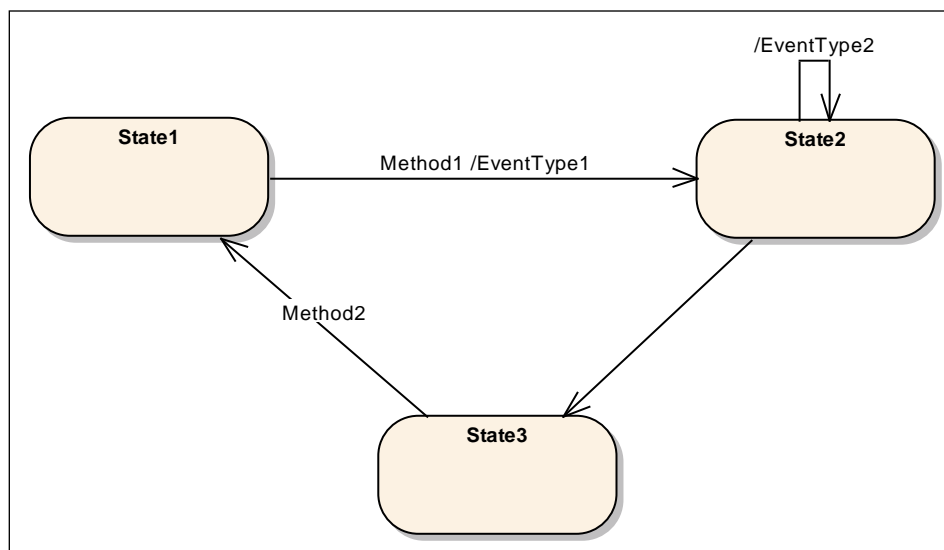


Figure 1 – Example of a simple state machine

For simplicity, the state machines described in this specification will only support causes in form of specifying *Methods* that have to be called and effects in form of *EventTypes* or *Events* that are generated. However, the defined infrastructure allows extending this to support additional different causes and effects.

4.2.2 State machine containing substates

Figure 2 shows an example of a state machine where "State6" is a sub-state-machine. This means, that when the overall state machine is in State6, this state can be distinguished to be in the sub-states "State7" or "State8". Sub-state-machines can be nested, that is, "State7" could be another sub-state-machine.

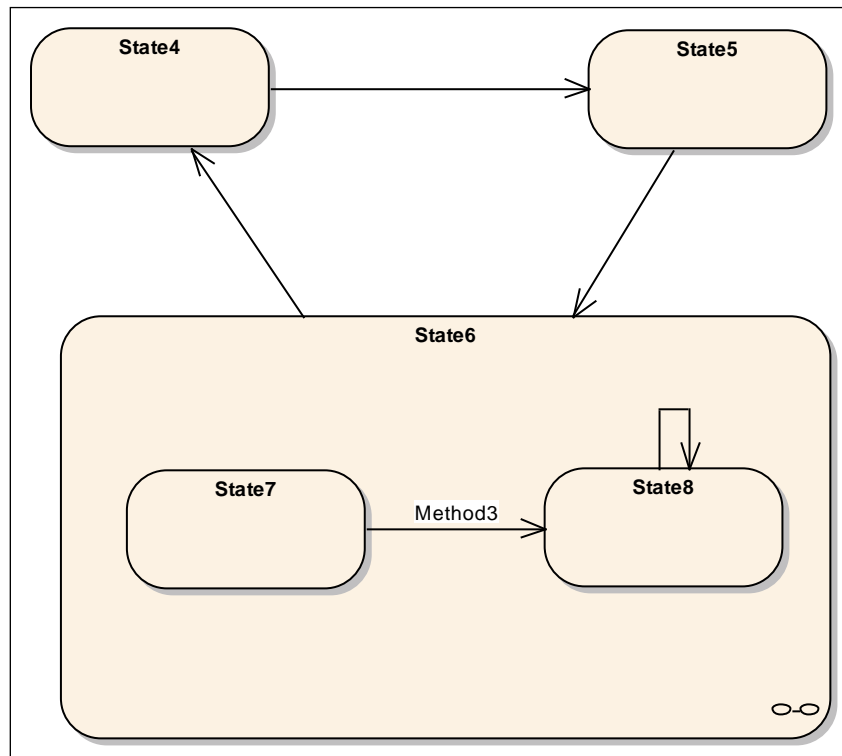


Figure 2 – Example of a state machine having a sub-machine

4.3 Definition of state machine

The infrastructure of state machines defined in this specification only deals with the basics of state machines needed to support OPC 10000-9 and OPC 10000-10. The intention is to keep the base simple but extensible.

For the state machines defined in this specification we assume that state machines are typed and instances of a type have their states and semantics specified by the type. For some types, this means that the states and transitions are fixed. For other types the states and transitions may be dynamic or unknown. A state machine where all the states are specified explicitly by the type is called a finite state machine.

Therefore, we distinguish between *StateMachineType* and *StateMachine* and their subtypes like *FiniteStateMachineType*. The *StateMachineType* specifies a description of the state machine, that is, its states, transitions, etc., whereas the *StateMachine* is an instance of the *StateMachineType* and only contains the current state.

Each *StateMachine* contains information about the current state. If the *StateMachineType* has *SubStateMachines*, the *StateMachine* also contains information about the current state of the *SubStateMachines*. *StateMachines* which have their states completely defined by the type are instances of a *FiniteStateMachineType*.

Each *FiniteStateMachineType* has one or more *States*. For simplicity, we do not distinguish between different *States* like the start or the end states.

Each *State* can have one or more *SubStateMachines*.

Each *FiniteStateMachineType* may have one or more *Transitions*. A *Transition* is directed and points from one *State* to another *State*.

Each *Transition* can have one or more *Causes*. A *Cause* leads a *FiniteStateMachine* to change its current *State* from the source of the *Transition* to its target. In this specification we only specify *Method* calls to be *Causes* of *Transitions*. *Transitions* do not have to have a *Cause*. A *Transition* can always be caused by some server-internal logic that is not exposed in the *AddressSpace*.

Each *Transition* can have one or more *Effects*. An *Effect* occurs if the *Transition* is used to change the *State* of a *StateMachine*. In this specification we only specify the generation of *Events* to be *Effects* of a *Transition*. A *Transition* is not required to expose any *Effects* in the *AddressSpace*.

Although this specification only specifies simple concepts for state machines, the provided infrastructure is extensible. If needed, special *States* can be defined as well as additional *Causes* or *Effects*.

4.4 Representation of state machines in the AddressSpace

4.4.1 Overview

The types defined in this specification are illustrated in Figure 3. The *MyFiniteStateMachineType* is a minimal example which illustrates how these *Types* can be used to describe a *StateMachine*. See OPC 10000-9 and OPC 10000-10 for additional examples of *StateMachines*.

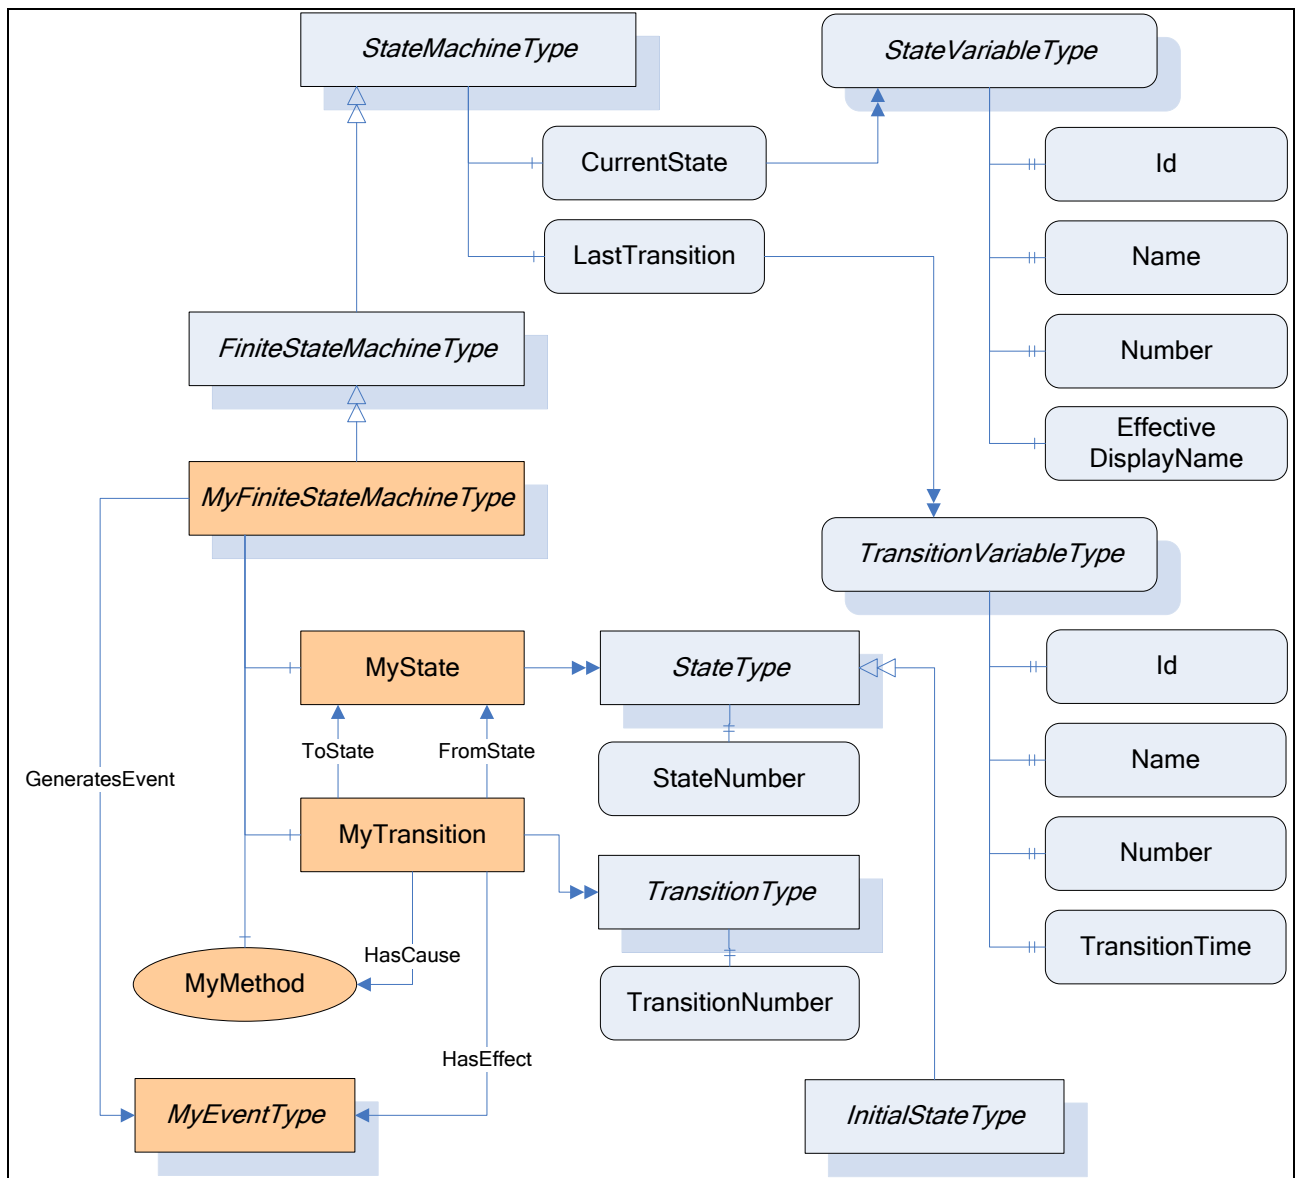


Figure 3 – The StateMachine Information Model

4.4.2 StateMachineType

The *StateMachineType* is the base *ObjectType* for all *StateMachineTypes*. It defines a single *Variable* which represents the current state of the machine. An instance of this *ObjectType* shall generate an *Event* whenever a significant state change occurs. The *Server* decides which state changes are significant. *Servers* shall use the *GeneratesEvent ReferenceType* to indicate which *Event(s)* could be produced by the *StateMachine*.

Subtypes may add *Methods* which affect the state of the machine. The *Executable Attribute* is used to indicate whether the *Method* is valid given the current state of the machine. The generation of *AuditEvents* for *Methods* is defined in OPC 10000-4. A *StateMachine* may not be active. In this case, the *CurrentState* and *LastTransition Variables* shall have a status equal to *Bad_StateNotActive* (see Table 19).

Subtypes may add components which are instances of *StateMachineTypes*. These components are considered to be sub-states of the *StateMachine*. *SubStateMachines* are only active when the parent machine is in an appropriate state.

Events produced by *SubStateMachines* may be suppressed by the parent machine. In some cases, the parent machine will produce a single *Event* that reflects changes in multiple *SubStateMachines*.

FiniteStateMachineType is a subtype of *StateMachineType* that provides a mechanism to explicitly define the states and transitions. A *Server* should use this mechanism if it knows what the possible states are and the state machine is not trivial. The *FiniteStateMachineType* is defined in 4.4.6.

The *StateMachineType* is formally defined in Table 1.

Table 1 – StateMachineType definition

Attribute	Value				
BrowseName	StateMachineType				
IsAbstract	False				
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the BaseObjectType defined in OPC 10000-5					
HasSubtype	ObjectType	FiniteStateMachineType	Defined in 4.4.6		
HasComponent	Variable	CurrentState	LocalizedText	StateVariableType	Mandatory
HasComponent	Variable	LastTransition	LocalizedText	TransitionVariableType	Optional
Conformance Units					
Base Info State Machine Instance					

CurrentState stores the current state of an instance of the *StateMachineType*. *CurrentState* provides a human readable name for the current state which may not be suitable for use in application control logic. Applications should use the *Id Property* of *CurrentState* if they need a unique identifier for the state.

LastTransition stores the last transition which occurred in an instance of the *StateMachineType*. *LastTransition* provides a human readable name for the last transition which may not be suitable for use in application control logic. Applications should use the *Id Property* of *LastTransition* if they need a unique identifier for the transition.

4.4.3 StateVariableType

The *StateVariableType* is the base *VariableType* for *Variables* that store the current state of a *StateMachine* as a human readable name.

The *StateVariableType* is formally defined in Table 2.

Table 2 – StateVariableType definition

Attribute	Value				
BrowseName	StateVariableType				
DataType	LocalizedText				
ValueRank	-1 (-1 = Scalar)				
IsAbstract	False				
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the <i>BaseDataVariableType</i> defined in OPC 10000-5					
HasSubtype	VariableType	FiniteStateVariableType	Defined in 4.4.7		
HasProperty	Variable	Id	BaseDataType	PropertyType	Mandatory
HasProperty	Variable	Name	QualifiedName	PropertyType	Optional
HasProperty	Variable	Number	UInt32	PropertyType	Optional
HasProperty	Variable	EffectiveDisplayName	LocalizedText	PropertyType	Optional
HasProperty	Variable	ContinuationOptions	DescriptionNodeIdDataType[]	PropertyType	Optional
HasProperty	Variable	ExtendedInformation	LocalizedText	PropertyType	Optional
HasProperty	Variable	VendorCode	String	PropertyType	Optional
Conformance Units					
Base Info State Machine Instance					

Id is a name which uniquely identifies the current state within the *StateMachineType*. A subtype may restrict the *DataType*.

Name is a *QualifiedName* which uniquely identifies the current state within the *StateMachineType*.

Number is an integer which uniquely identifies the current state within the *StateMachineType*.

EffectiveDisplayName contains a human readable name for the current state of the state machine after taking the state of any *SubStateMachines* in account. There is no rule specified for which state or sub-state should be used. It is up to the *Server* and will depend on the semantics of the *StateMachineType*.

ContinuationOptions is an array of options that indicate possible next steps or actions that can be taken from the current state. Each option is represented as a description and a *NodeId*. The description is a human-readable description of the action, and the optional *NodeId* represents a *Node* that is involved in the continuation (e.g., a *Method* that can be invoked to transition to a new state).

ExtendedInformation provides additional, more detailed information about the current state or the available continuation options. The exact nature of this information depends on the specific implementation and use case.

VendorCode is an additional, vendor-specific identifier. It can be used to provide vendor-specific information about the current state or the available continuation options.

StateMachines produce *Events* which may include the current state of a *StateMachine*. In that case *Servers* shall provide the *Name*, *Number* and *EffectiveDisplayName* of the *StateVariableType* in the *Event*, even if they are not provided on the instances in the *AddressSpace*.

4.4.4 DescriptionNodeIdDataType

This structure contains the description and optionally a *NodeId*. It is used to provide a human-readable description of something plus optionally the *NodeId* in case the something is represented in the *AddressSpace*. The structure is defined in Table 3.

Table 3 – DescriptionNodeIdDataType Structure

Name	Type	Description
DescriptionNodeIdDataType	structure	
Description	0:LocalizedText	The human-readable description of something.
NodeId	0:NodeId	Optionally provided NodeId, in case the referenced something is represented as Node in the AddressSpace.

Its representation in the *AddressSpace* is defined in Table 4.

Table 4 – DescriptionNodeIdDataType Definition

Attribute	Value				
BrowseName	DescriptionNodeIdDataType				
IsAbstract	False				
Description	A human-readable description of something plus optionally the NodeId in case the something is represented in the AddressSpace				
References	NodeClass	BrowseName	DataType	TypeDefinition	Other
Subtype of Structure defined in OPC 10000-5					
Conformance Units					
Base Info State Machine DescriptionNodeIdDataType					

4.4.5 TransitionVariableType

The *TransitionVariableType* is the base *VariableType* for *Variables* that store a *Transition* that occurred within a *StateMachine* as a human readable name.

The *SourceTimestamp* for the value specifies when the *Transition* occurred. This value may also be exposed with the *TransitionTime Property*.

The *TransitionVariableType* is formally defined in Table 5.

Table 5 – TransitionVariableType definition

Attribute		Value			
BrowseName		TransitionVariableType			
DataType		LocalizedText			
ValueRank		-1 (-1 = Scalar)			
IsAbstract		False			
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the <i>BaseDataVariableType</i> defined in OPC 10000-5					
HasSubtype	VariableType	FiniteTransitionVariableType	Defined in 4.4.8		
HasProperty	Variable	Id	BaseDataType	PropertyType	Mandatory
HasProperty	Variable	Name	QualifiedName	PropertyType	Optional
HasProperty	Variable	Number	UInt32	PropertyType	Optional
HasProperty	Variable	TransitionTime	UtcTime	PropertyType	Optional
HasProperty	Variable	EffectiveTransitionTime	UtcTime	PropertyType	Optional
Conformance Units					
Base Info State Machine Instance					

Id is a name which uniquely identifies a *Transition* within the *StateMachineType*. A subtype may restrict the *DataType*.

Name is a *QualifiedName* which uniquely identifies a transition within the *StateMachineType*.

Number is an integer which uniquely identifies a transition within the *StateMachineType*.

TransitionTime specifies when the transition occurred.

EffectiveTransitionTime specifies the time when the current state or one of its substates was entered. If, for example, a StateA is active and – while active – switches several times between its substates SubA and SubB, then the *TransitionTime* stays at the point in time where StateA became active whereas the *EffectiveTransitionTime* changes with each change of a substate.

4.4.6 FiniteStateMachineType

The *FiniteStateMachineType* is the base *ObjectType* for *StateMachines* that explicitly define the possible *States* and *Transitions*. Once the *States* and *Transitions* are defined subtypes shall not add new *States* and *Transitions* (see 4.4.19). *Subtypes* may add causes or effects.

The *States* of the machine are represented with instances of the *StateType ObjectType*. Each *State* shall have a *BrowseName* which is unique within the *StateMachine* and shall have a *StateNumber* which shall also be unique across all *States* defined in the *StateMachine*. Be aware that *States* in a *SubStateMachine* may have the same *StateNumber* or *BrowseName* as *States* in the parent machine. A concrete subtype of *FiniteStateMachineType* shall define at least one *State*.

A *StateMachine* may define one *State* which is an instance of the *InitialStateType*. This *State* is the *State* that the machine goes into when it is activated.

The *Transitions* that may occur are represented with instances of the *TransitionType*. Each *Transition* shall have a *BrowseName* which is unique within the *StateMachine* and may have a *TransitionNumber* which shall also be unique across all *Transitions* defined in the *StateMachine*.

The initial *State* for a *Transition* is a *StateType Object* which is the target of a *FromState Reference*. The final *State* for a *Transition* is a *StateType Object* which is the target of a *ToState Reference*. The *FromState* and *ToState References* shall always be specified.

A *Transition* may produce an *Event*. The *Event* is indicated by a *HasEffect Reference* to a subtype of *BaseEventType*. The *StateMachineType* shall have *GeneratesEvent References* to the targets of a *HasEffect Reference* for each of its *Transitions*.

A *FiniteStateMachineType* may define *Methods* that cause a transition to occur. These *Methods* are targets of *HasCause References* for each of the *Transitions* that may be triggered by the

Method. The *Executable Attribute* for a *Method* is used to indicate whether the current *State* of the machine allows the *Method* to be called.

A *FiniteStateMachineType* may have sub-state-machines which are represented as instances of *StateMachineType ObjectTypes*. Each *State* shall have a *HasSubStateMachine Reference* to the *StateMachineType Object* which represents the child *States*. The *SubStateMachine* is not active if the parent *State* is not active. In this case the *CurrentState* and *LastTransition Variables* of the *SubStateMachine* shall have a status equal to *Bad_StateNotActive* (see Table 19).

The *FiniteStateMachineType* is formally defined in Table 6.

Table 6 – FiniteStateMachineType definition

Attribute		Value			
BrowseName		FiniteStateMachineType			
IsAbstract		True			
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the StateMachineType defined in 4.4.2					
HasComponent	Variable	CurrentState	LocalizedText	FiniteStateVariableType	Mandatory
HasComponent	Variable	LastTransition	LocalizedText	FiniteTransitionVariableType	Optional
HasComponent	Variable	AvailableStates	NodeId[]	BaseDataVariableType	Optional
HasComponent	Variable	AvailableTransitions	NodeId[]	BaseDataVariableType	Optional
Conformance Units					
Base Info Finite State Machine Instance					
Base Info Available States and Transitions					

In some *Servers* an instance of a *StateMachine* may restrict the *States* and / or *Transitions* that are available. These restrictions may result from the internal design of the instance. For example, the *StateMachine* for an instrument's limit alarm which only supports Hi and HiHi and can not produce a Low or LowLow. An instance of a *StateMachine* may also dynamically change the available *States* and/or *Transitions* based on its operating mode. For example, when a piece of equipment is in a maintenance mode the available *States* may be limited to some subset of the *States* available during normal operation.

The *AvailableStates Variable* provides a *NodeId* list of the *States* that are present in the *StateMachine* instance. The list may change during operation of the *Server*.

The *AvailableTransitions Variable* provides a *NodeId* list of the *Transitions* that are present in the *StateMachine* instance. The list may change during operation of the *Server*.

An example of a *FiniteStateMachineType* is shown in Figure 4.

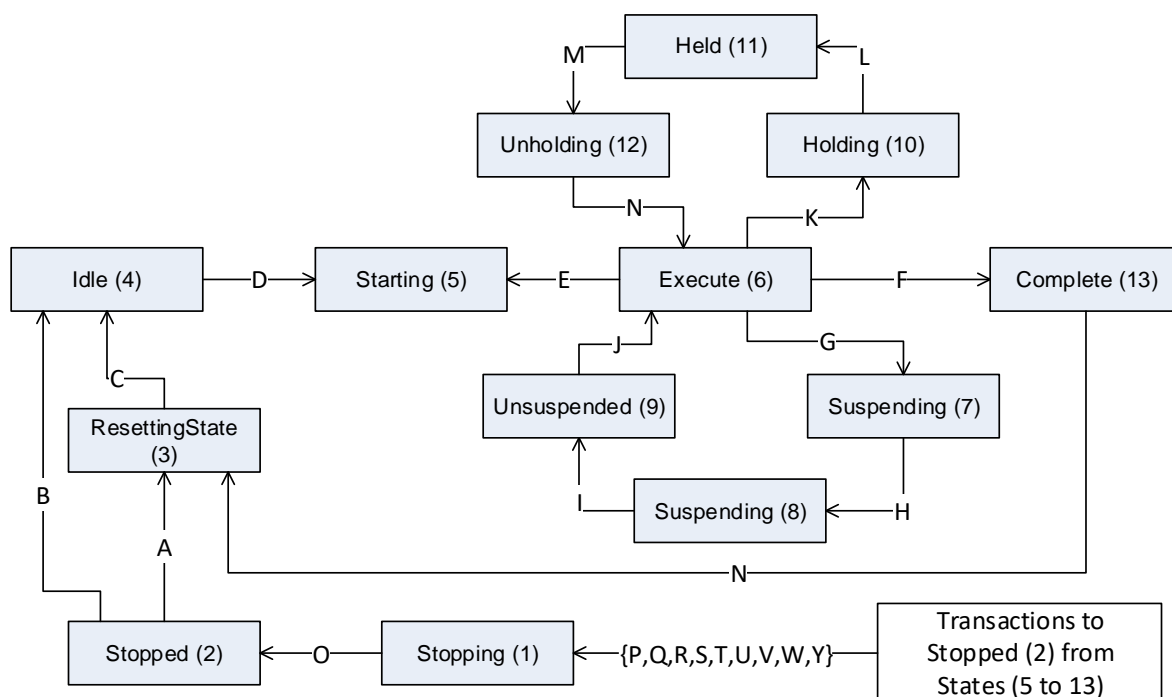


Figure 4 – Example of a FiniteStateMachine type

An example instance of the type is shown in Figure 5. In this example the *States* {7,8,9} and the *Transitions* {G,H,I,J} are not available in this instance.

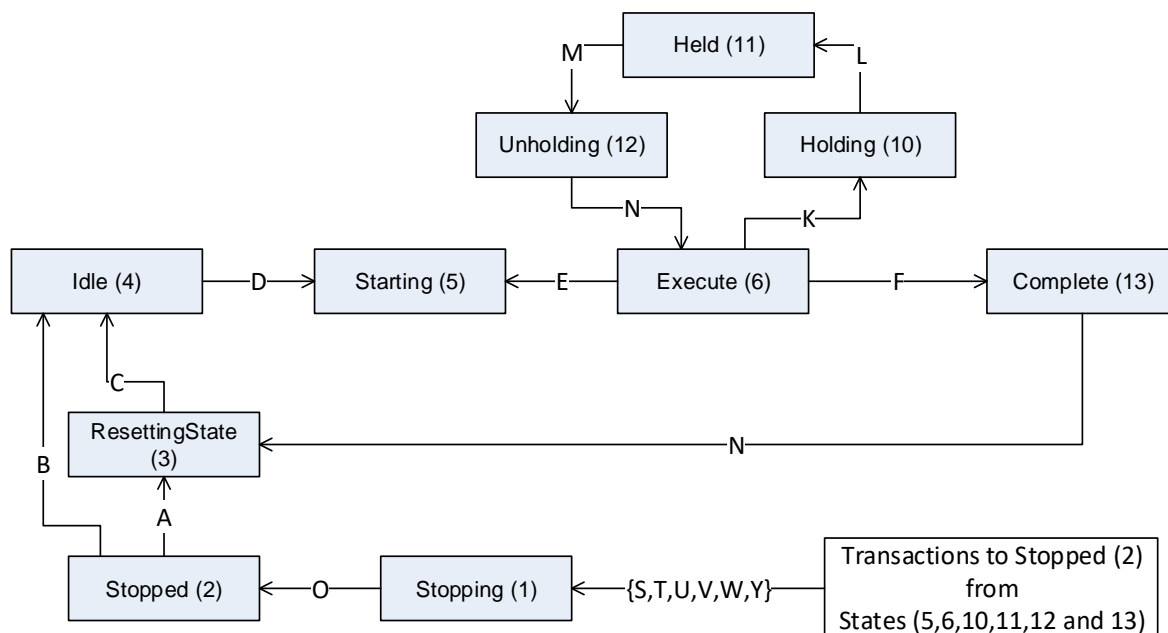


Figure 5 – Example of a FiniteStateMachine instance

4.4.7 FiniteStateVariableType

The *FiniteStateVariableType* is a subtype of *StateVariableType* and is used to store the current state of a *FiniteStateMachine* as a human readable name.

The *FiniteStateVariableType* is formally defined in Table 7.

Table 7 – FiniteStateVariableType definition

Attribute	Value				
BrowseName	FiniteStateVariableType				
DataType	LocalizedText				
ValueRank	-1 (-1 = Scalar)				
IsAbstract	False				
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the <i>StateVariableType</i> defined 4.4.3					
HasProperty	Variable	Id	NodeId	PropertyType	Mandatory
Conformance Units					
Base Info Finite State Machine Instance					

Id is inherited from the *StateVariableType* and overridden to reflect the required *DataType*. This value shall be the *NodeId* of one of the *State Objects* of the *FiniteStateMachineType*. If the *FiniteStateMachine* is subtyped, it shall be the *NodeId* of the *State* defined on the supertype, i.e., where the *State* is defined the first time in the type hierarchy.

The *Name Property* is inherited from *StateVariableType*. Its *Value* shall be the *BrowseName* of one of the *State Objects* of the *FiniteStateMachineType*.

The *Number Property* is inherited from *StateVariableType*. Its *Value* shall be the *StateNumber* for one of the *State Objects* of the *FiniteStateMachineType*.

4.4.8 FiniteTransitionVariableType

The *FiniteTransitionVariableType* is a subtype of *TransitionVariableType* and is used to store a *Transition* that occurred within a *FiniteStateMachine* as a human readable name.

The *FiniteTransitionVariableType* is formally defined in Table 8.

Table 8 – FiniteTransitionVariableType definition

Attribute	Value				
BrowseName	FiniteTransitionVariableType				
DataType	LocalizedText				
ValueRank	-1 (-1 = Scalar)				
IsAbstract	False				
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the <i>TransitionVariableType</i> defined in 4.4.5					
HasProperty	Variable	Id	NodeId	PropertyType	Mandatory
Conformance Units					
Base Info Finite State Machine Instance					

Id is inherited from the *TransitionVariableType* and overridden to reflect the required *DataType*. This value shall be the *NodeId* of one of the *Transition Objects* of the *FiniteStateMachineType*. If the *FiniteStateMachine* is subtyped, it shall be the *NodeId* of the *Transition* defined on the supertype, i.e., where the *Transition* is defined the first time in the type hierarchy.

The *Name Property* is inherited from the *TransitionVariableType*. Its *Value* shall be the *BrowseName* of one of the *Transition Objects* of the *FiniteStateMachineType*.

The *Number Property* is inherited from the *TransitionVariableType*. Its *Value* shall be the *TransitionNumber* for one of the *Transition Objects* of the *FiniteStateMachineType*.

4.4.9 StateType

States of a *FiniteStateMachine* are represented as *Objects* of the *StateType*. Each *Object* of the *StateType* or one of its subtypes shall be referenced from the *ObjectType FiniteStateMachineType* or one of its subtypes using a *HasComponent Reference* or a subtype of *HasComponent* and shall not have a *ModellingRule* as they are not applied on the instances.

The *StateType* is formally defined in Table 9.


Table 9 – StateType definition

Attribute	Value				
BrowseName	StateType				
IsAbstract	False				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the BaseObjectType defined in OPC 10000-5					
HasProperty	Variable	StateNumber	UInt32	PropertyType	Mandatory
HasSubtype	ObjectType	InitialStateType	Defined in 4.4.10		
HasSubtype	ObjectType	ChoiceStateType	Defined in 4.6.2		
Conformance Units					
Base Info Finite State Machine Instance					

4.4.10 InitialStateType

The *InitialStateType* is a subtype of the *StateType* and is formally defined in Table 10. An *Object* of the *InitialStateType* represents the *State* that a *FiniteStateMachine* enters when it is activated. Each *FiniteStateMachine* can have at most one *State* of type *InitialStateType*, but a *FiniteStateMachine* does not have to have a *State* of this type.

A *SubStateMachine* goes into its initial state whenever the parent state is entered. However, a state machine may define a transition that goes directly to a state of the *SubStateMachine*. In this case the *SubStateMachine* goes into that *State* instead of the initial *State*. The two scenarios are illustrated in Figure 6. The transition from "State5" to "State6" causes the *SubStateMachine* to go into the initial *State* ("State7"), however, the transition from "State4" to "State8" causes the parent machine to go to "State6" and the *SubStateMachine* will go to "State8".

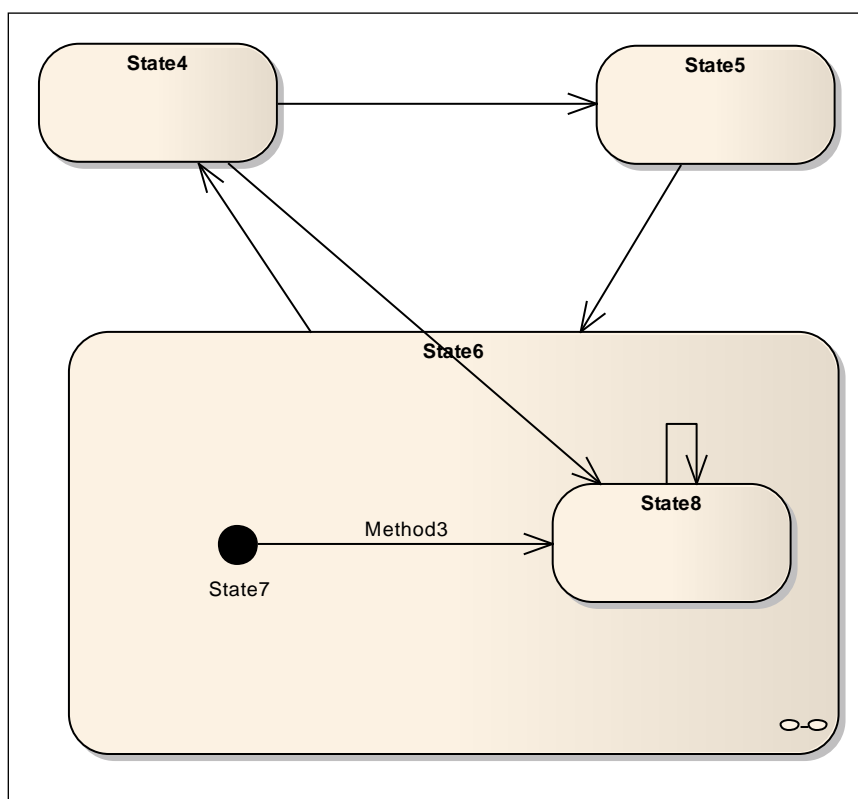**Figure 6 – Example of an initial State in a sub-machine**

If no initial state for a *SubStateMachine* exists and the *State* having the *SubStateMachine* is entered directly, then the *State* of the *SubStateMachine* is server-specific.

Table 10 – InitialStateType definition

Attribute		Value			
BrowseName		InitialStateType			
IsAbstract		False			
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the <i>StateType</i> defined in 4.4.9					
Conformance Units					
Base Info Finite State Machine Instance					

4.4.11 TransitionType

Transitions of a *FiniteStateMachine* are represented as *Objects* of the *ObjectType TransitionType* formally defined in Table 11. Each *Object* of the *TransitionType* or one of its subtypes shall be referenced from the *ObjectType FiniteStateMachineType* or one of its subtypes using a *HasComponent Reference* or a subtype of *HasComponent* and shall not have a *ModellingRule* as they are not applied on the instances.

Each valid *Transition* shall have exactly one *FromState Reference* and exactly one *ToState Reference*, each pointing to an *Object* of the *ObjectType StateType*.

Each *Transition* can have one or more *HasCause References* pointing to the cause that triggers the *Transition*.

Each *Transition* can have one or more *HasEffect References* pointing to the effects that occur when the *Transition* was triggered.

Table 11 – TransitionType definition

Attribute		Value			
BrowseName		TransitionType			
IsAbstract		False			
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the <i>BaseObjectType</i> defined in OPC 10000-5					
HasProperty	Variable	TransitionNumber	UInt32	PropertyType	Mandatory
Conformance Units					
Base Info Finite State Machine Instance					

4.4.12 FromState

The *FromState ReferenceType* is a concrete *ReferenceType* and can be used directly. It is a subtype of *NonHierarchicalReferences*.

The semantic of this *ReferenceType* is to point from a *Transition* to the starting *State* the *Transition* connects.

The *SourceNode* of this *ReferenceType* shall be an *Object* of the *ObjectType TransitionType* or one of its subtypes. The *TargetNode* of this *ReferenceType* shall be an *Object* of the *ObjectType StateType* or one of its subtypes.

The representation of the *FromState ReferenceType* in the *AddressSpace* is specified in Table 12.

Table 12 – FromState ReferenceType

Attributes		Value	
BrowseName		FromState	
InverseName		ToTransition	
Symmetric		False	
IsAbstract		False	
References	NodeClass	BrowseName	Comment
Conformance Units			
Base Info Finite State Machine Instance			

4.4.13 ToState

The *ToState ReferenceType* is a concrete *ReferenceType* and can be used directly. It is a subtype of *NonHierarchicalReferences*.

The semantic of this *ReferenceType* is to point from a *Transition* to the ending *State* the *Transition* connects.

The *SourceNode* of this *ReferenceType* shall be an *Object* of the *ObjectType TransitionType* or one of its subtypes. The *TargetNode* of this *ReferenceType* shall be an *Object* of the *ObjectType StateType* or one of its subtypes.

References of this *ReferenceType* may be only exposed uni-directional. Sometimes this is required, for example, if a *Transition* points to a *State* of a sub-machine.

The representation of the *ToState ReferenceType* in the *AddressSpace* is specified in Table 13.

Table 13 – ToState ReferenceType

Attributes	Value		
BrowseName	ToState		
InverseName	FromTransition		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment
Conformance Units			
Base Info Finite State Machine Instance			

4.4.14 HasCause

The *HasCause ReferenceType* is a concrete *ReferenceType* and can be used directly. It is a subtype of *NonHierarchicalReferences*.

The semantic of this *ReferenceType* is to point from a *Transition* to something that causes the *Transition*. In this specification we only define *Methods* as *Causes*. However, the *ReferenceType* is not restricted to point to *Methods*. The referenced *Methods* can, but do not have to point to a *Method* of the *StateMachineType*. For example, it is allowed to point to a server-wide restart *Method* leading the state machine to go into its initial state.

The *SourceNode* of this *ReferenceType* shall be an *Object* of the *ObjectType TransitionType* or one of its subtypes. The *TargetNode* can be of any *NodeClass*.

The representation of the *HasCause ReferenceType* in the *AddressSpace* is specified in Table 14.

Table 14 – HasCause ReferenceType

Attributes	Value		
BrowseName	HasCause		
InverseName	MaybeCausedBy		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment
Conformance Units			
Base Info Finite State Machine Instance			

4.4.15 HasEffect

The *HasEffect ReferenceType* is a concrete *ReferenceType* and can be used directly. It is a subtype of *NonHierarchicalReferences*.

The semantic of this *ReferenceType* is to point from a *Transition* to something that will be effected when the *Transition* is triggered. In this specification we only define *EventTypes* as *Effects*. However, the *ReferenceType* is not restricted to point to *EventTypes*.

The *SourceNode* of this *ReferenceType* shall be an *Object* of the *ObjectType TransitionType* or one of its subtypes. The *TargetNode* can be of any *NodeClass*.

If the *TargetNode* is an *EventType*, each time the *Transition* is triggered (either by a *Client* or internally in the *Server*) an *Event* of that *EventType* or a subtype shall be generated.

The representation of the *HasEffect ReferenceType* in the *AddressSpace* is specified in Table 15.

Table 15 – HasEffect ReferenceType

Attributes	Value		
BrowseName	HasEffect		
InverseName	MaybeEffectedBy		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment
Conformance Units			
Base Info Finite State Machine Instance			

4.4.16 HasSubStateMachine

The *HasSubStateMachine ReferenceType* is a concrete *ReferenceType* and can be used directly. It is a subtype of *NonHierarchicalReferences*.

The semantic of this *ReferenceType* is to point from a *State* to an instance of a *StateMachineType* which represents the sub-states for the *State*.

The *SourceNode* of this *ReferenceType* shall be an *Object* of the *ObjectType StateType*. The *TargetNode* shall be an *Object* of the *ObjectType StateMachineType* or one of its subtypes. Each *Object* can be the *TargetNode* of at most one *HasSubStateMachine Reference*.

The *SourceNode* (the state) and the *TargetNode* (the *SubStateMachine*) shall belong to the same *StateMachine*. Therefore, the *SourceNode* shall be referenced from the *ObjectType FiniteStateMachineType* or one of its subtypes and the *TargetNode* shall be referenced from the same *ObjectType*, both using a *HasComponent Reference* or a subtype of *HasComponent*.

The representation of the *HasSubStateMachine ReferenceType* in the *AddressSpace* is specified in Table 16.

Table 16 – HasSubStateMachine ReferenceType

Attributes	Value		
BrowseName	HasSubStateMachine		
InverseName	SubStateMachineOf		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment
Conformance Units			
Base Info Finite State Machine Instance			

4.4.17 TransitionEventType

The *TransitionEventType* is a subtype of the *BaseEventType*. It can be used to generate an *Event* identifying that a *Transition* of a *StateMachine* was triggered. It is formally defined in Table 17.

Table 17 – TransitionEventType

Attribute	Value				
BrowseName	TransitionEventType				
IsAbstract	True				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the base <i>BaseEventType</i> defined in OPC 10000-5					
HasComponent	Variable	Transition	LocalizedText	TransitionVariableType	Mandatory
HasComponent	Variable	FromState	LocalizedText	StateVariableType	Mandatory
HasComponent	Variable	ToState	LocalizedText	StateVariableType	Mandatory
Conformance Units					
Base Info Finite State Machine Instance					

The *TransitionEventType* inherits the *Properties* of the *BaseEventType*.

The inherited *Property SourceNode* shall be filled with the *NodeId* of the *StateMachine* instance where the *Transition* occurs. If the *Transition* occurs in a *SubStateMachine*, then the *NodeId* of the *SubStateMachine* has to be used. If the *Transition* occurs between a *StateMachine* and a *SubStateMachine*, then the *NodeId* of the *StateMachine* has to be used, independent of the direction of the *Transition*.

Transition identifies the *Transition* that triggered the *Event*.

FromState identifies the *State* before the *Transition*.

ToState identifies the *State* after the *Transition*.

4.4.18 AuditUpdateStateEventType

The *AuditUpdateStateEventType* is a subtype of the *AuditUpdateMethodEventType*. It can be used to generate an *Event* identifying that a *Transition* of a *StateMachine* was triggered. It is formally defined in Table 18.

Table 18 – AuditUpdateStateEventType

Attribute	Value				
BrowseName	AuditUpdateStateEventType				
IsAbstract	True				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the <i>AuditUpdateMethodEventType</i> defined in OPC 10000-5					
HasProperty	Variable	OldStateId	BaseDataType	PropertyType	Mandatory
HasProperty	Variable	NewStateId	BaseDataType	PropertyType	Mandatory
Conformance Units					
Auditing UpdateStates					

The *AuditUpdateStateEventType* inherits the *Properties* of the *AuditUpdateMethodEventType*.

The inherited *Property SourceNode* shall be filled with the *NodeId* of the *StateMachine* instance where the *State* changed. If the *State* changed in a *SubStateMachine*, then the *NodeId* of the *SubStateMachine* has to be used.

The *SourceName* for *Events* of this type should be the effect that generated the event (e.g. the name of a Method). If the effect was generated by a *Method* call, the *SourceName* should be the name of the *Method* prefixed with "Method/".

OldStateId reflects the *Id* of the state prior the change.

NewStateId reflects the new *Id* of the state after the change.

4.4.19 Special Restrictions on subtyping StateMachines

In general, all rules on subtyping apply for *StateMachine* types as well. Some additional rules apply for *StateMachine* types.

States and *Transitions* are not instantiated, this information is only provided on the *ObjectType*. They have no *ModellingRule*, and thus, also the inheritance of *States* and *Transitions* is not defined. Therefore, the following rules apply for subtyping *StateMachines*. Each *State* and *Transition* defined on the supertype shall be available on the subtype as well. That is, for each *State* defined on the supertype another *Node* of the same *ObjectType* having the same *BrowseName* and the same *StateNumber* shall be defined on the subtype. For each *Transition* defined on the supertype another *Node* of the same *ObjectType* having the same *BrowseName* and the same *TransitionNumber* shall be defined on the subtype. All references defining the *StateMachine* (*HasCause*, *HasEffect*, *FromState*, *ToState*, *HasSubStateMachine*, *HasGuard*) shall be replicated in the subtype as well. If *InstanceDeclarations* are referenced (e.g., *Methods* used to trigger *Transitions*) either the *InstanceDeclaration* of the supertype is referenced or the *InstanceDeclaration* is overridden, and in the latter case the overridden *InstanceDeclaration* of the subtype shall be referenced.

If a *StateMachine* type is not abstract, subtypes of it shall not change the behaviour of it. That means, that in this case a subtype shall not add *States* and it shall not add *Transitions* between its *States*. However, a subtype may add *SubStateMachines*, it may add *Transitions* from the *States* to the *States* of the *SubStateMachine*, and it may add *Causes* and *Effects* to a *Transition*. In addition, a subtype of a *StateMachine* type shall not remove *States* or *Transitions*.

4.4.20 Specific StatusCodes for StateMachines

In Table 19 specific *StatusCodes* used for *StateMachines* are defined.

Table 19 – Specific StatusCodes for StateMachines

Symbolic Id	Description
Bad_StateNotActive	The accessed state is not active.

4.5 Examples of StateMachines in the AddressSpace

4.5.1 StateMachineType using inheritance

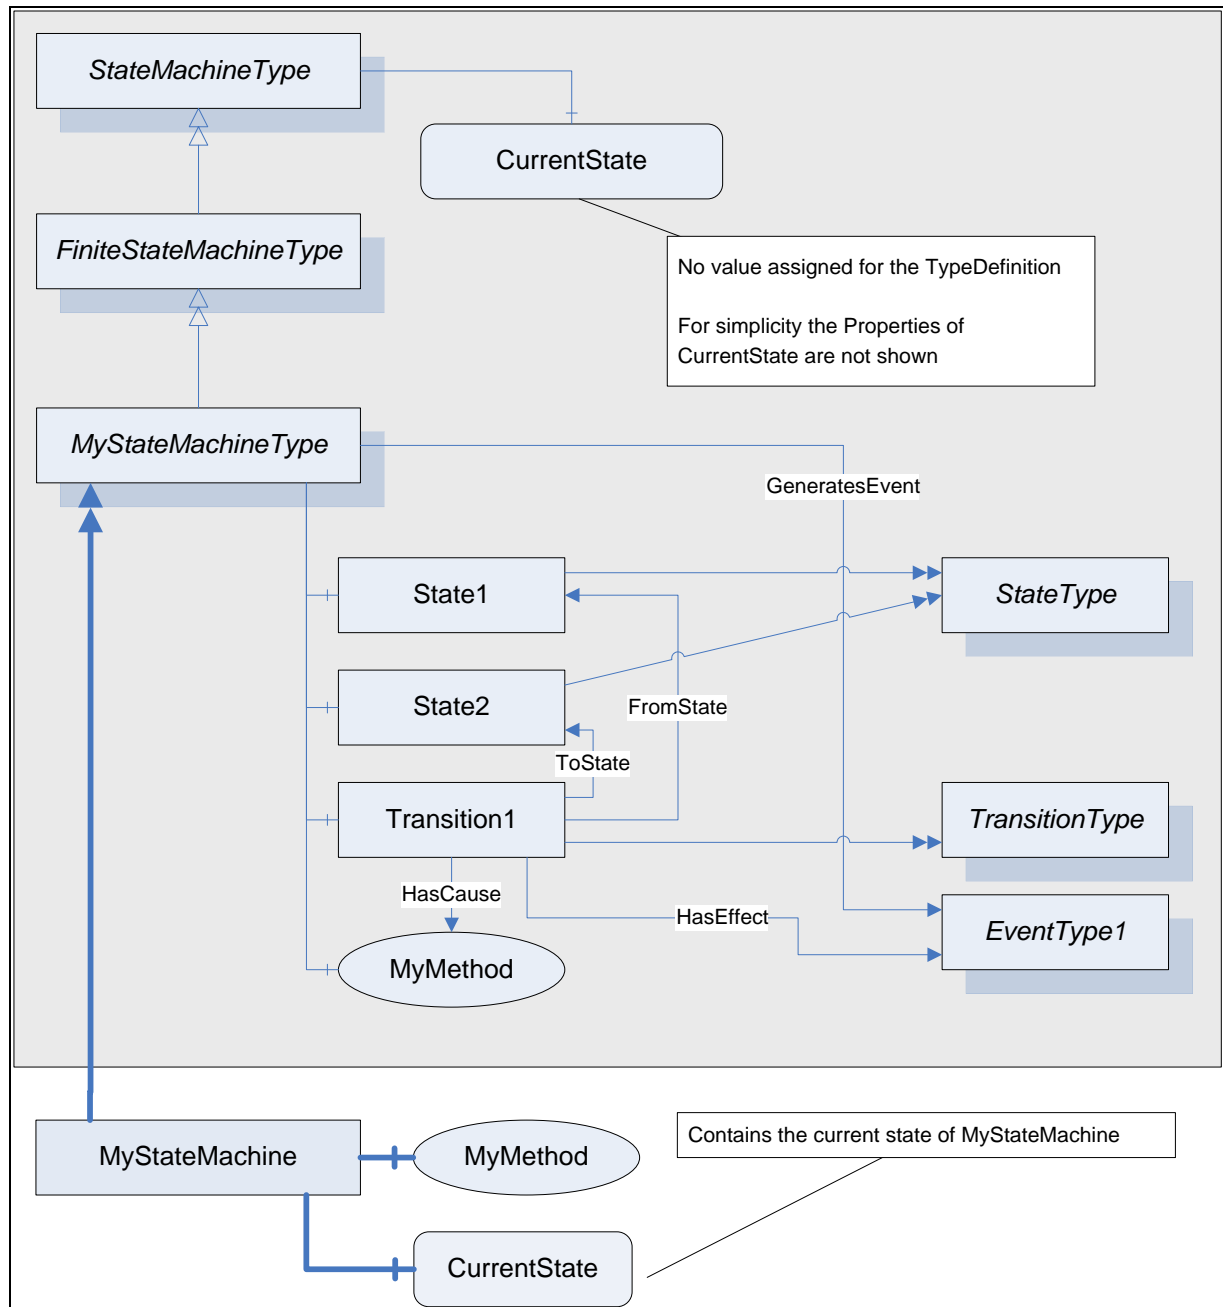


Figure 7 – Example of a StateMachineType using inheritance

In Figure 7 an example of a *StateMachine* is given using the Notation defined in OPC 10000-3. First, a new *StateMachineType* is defined, called "MyStateMachineType", inheriting from the base *FiniteStateMachineType*. It contains two *States*, "State1" and "State2" and a *Transition* "Transition1" between them. The *Transition* points to a *Method* "MyMethod" as the *Cause* of the *Transition* and an *EventType* "EventType1" as the *Effect* of the *Transition*.

Instances of "MyStateMachineType" can be created, for example "MyStateMachine". It has a *Variable* "CurrentState" representing the current *State*. The "MyStateMachine" *Object* only includes the *Nodes* which expose information specific to the instance.

4.5.2 StateMachineType with a SubStateMachine using inheritance

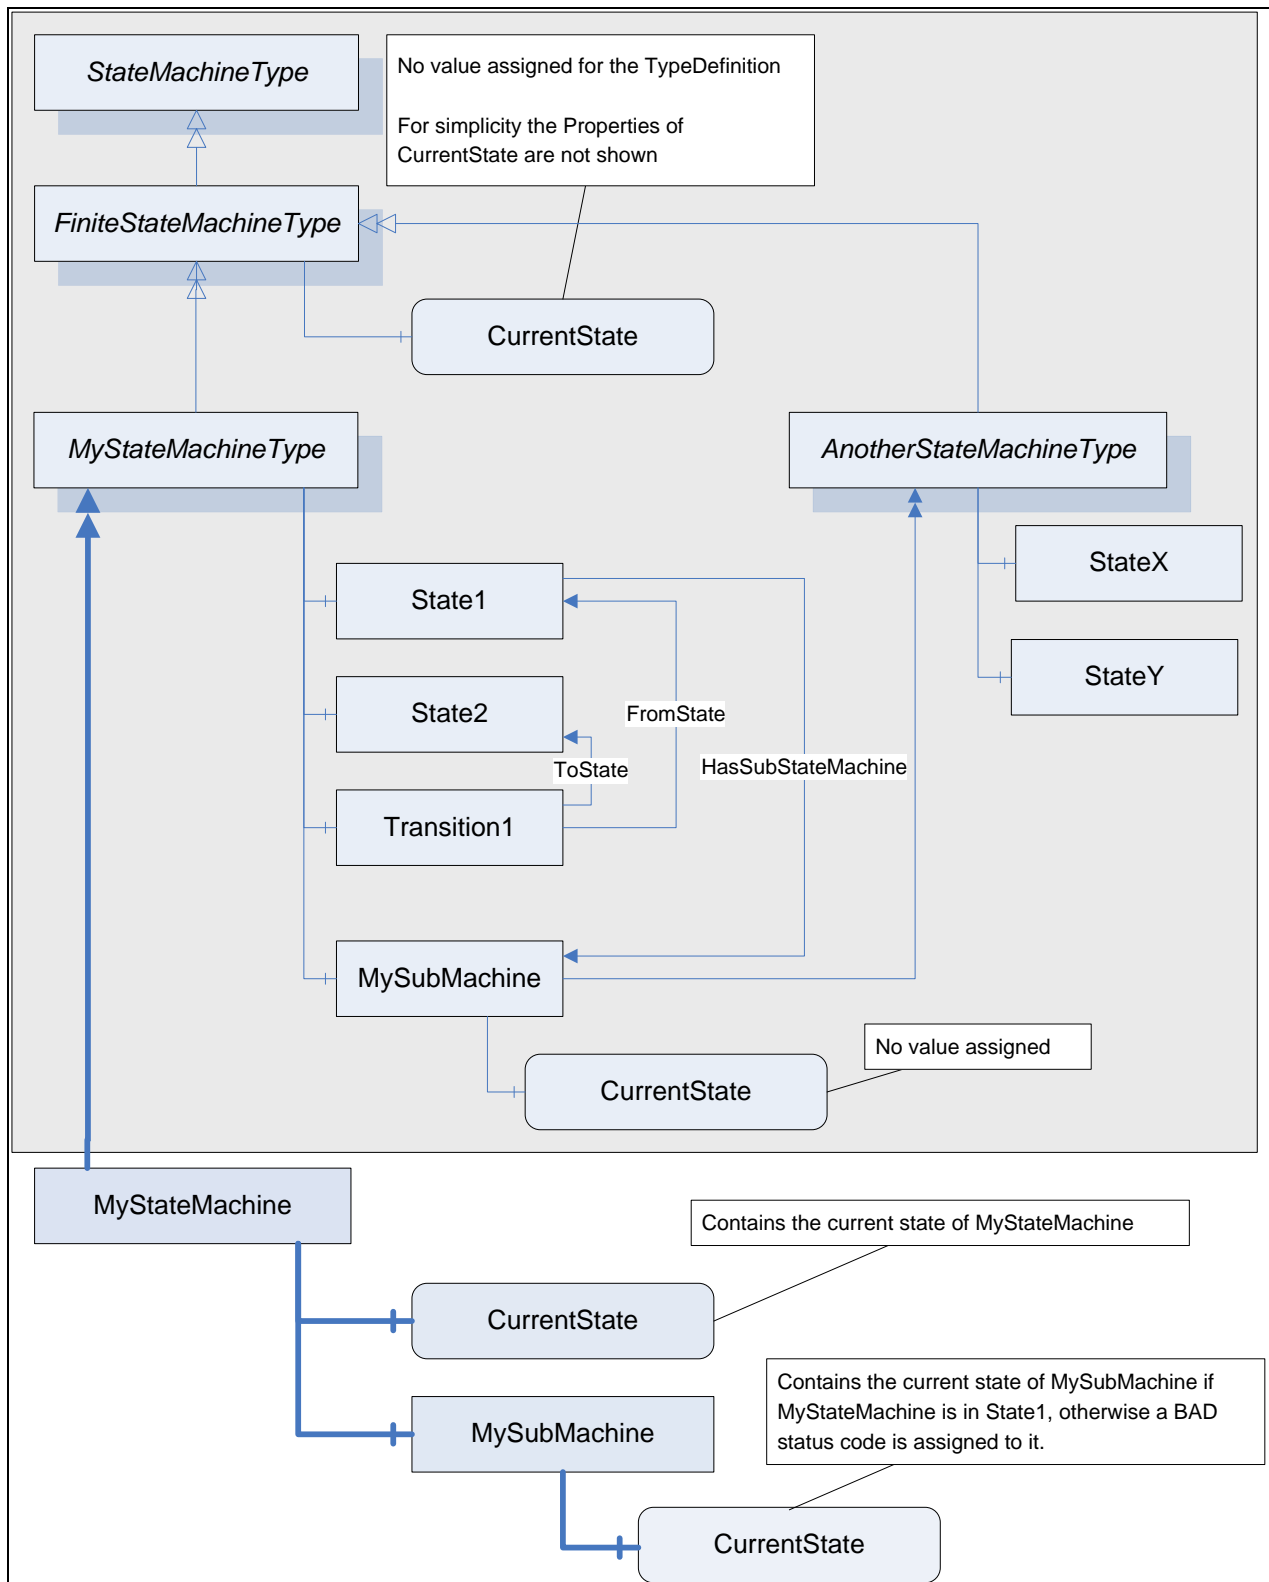


Figure 8 – Example of a StateMachineType with a SubStateMachine using inheritance

Figure 8 gives an example of a *StateMachineType* having a *SubStateMachine* for its "State1". For simplicity no effects and causes are shown, as well as type information for the *States* or *ModellingRules*.

The "MyStateMachineType" contains an *Object* "MySubMachine" of type "AnotherStateMachineType" representing a *SubStateMachine*. The "State1" references this *Object* with a *HasSubStateMachine* Reference, thus it is a *SubStateMachine* of "State1". Since "MySubMachine" is an *Object* of type "AnotherStateMachineType" it has a *Variable* representing the current *State*. Since it is used as an *InstanceDeclaration*, no value is assigned to this *Variable*.

An *Object* of "MyStateMachineType", called "MyStateMachine" has *Variables* for the current *State*, but also has an *Object* "MySubMachine" and a *Variable* representing the current state of the *SubStateMachine*. Since the *SubStateMachine* is only used when "MyStateMachine" is in "State1", a client would receive a *Bad_StateNotActive* *StatusCode* when reading the *SubStateMachine CurrentState* *Variable* if "MyStateMachine" is in a different *State*.

4.5.3 StateMachineType using containment

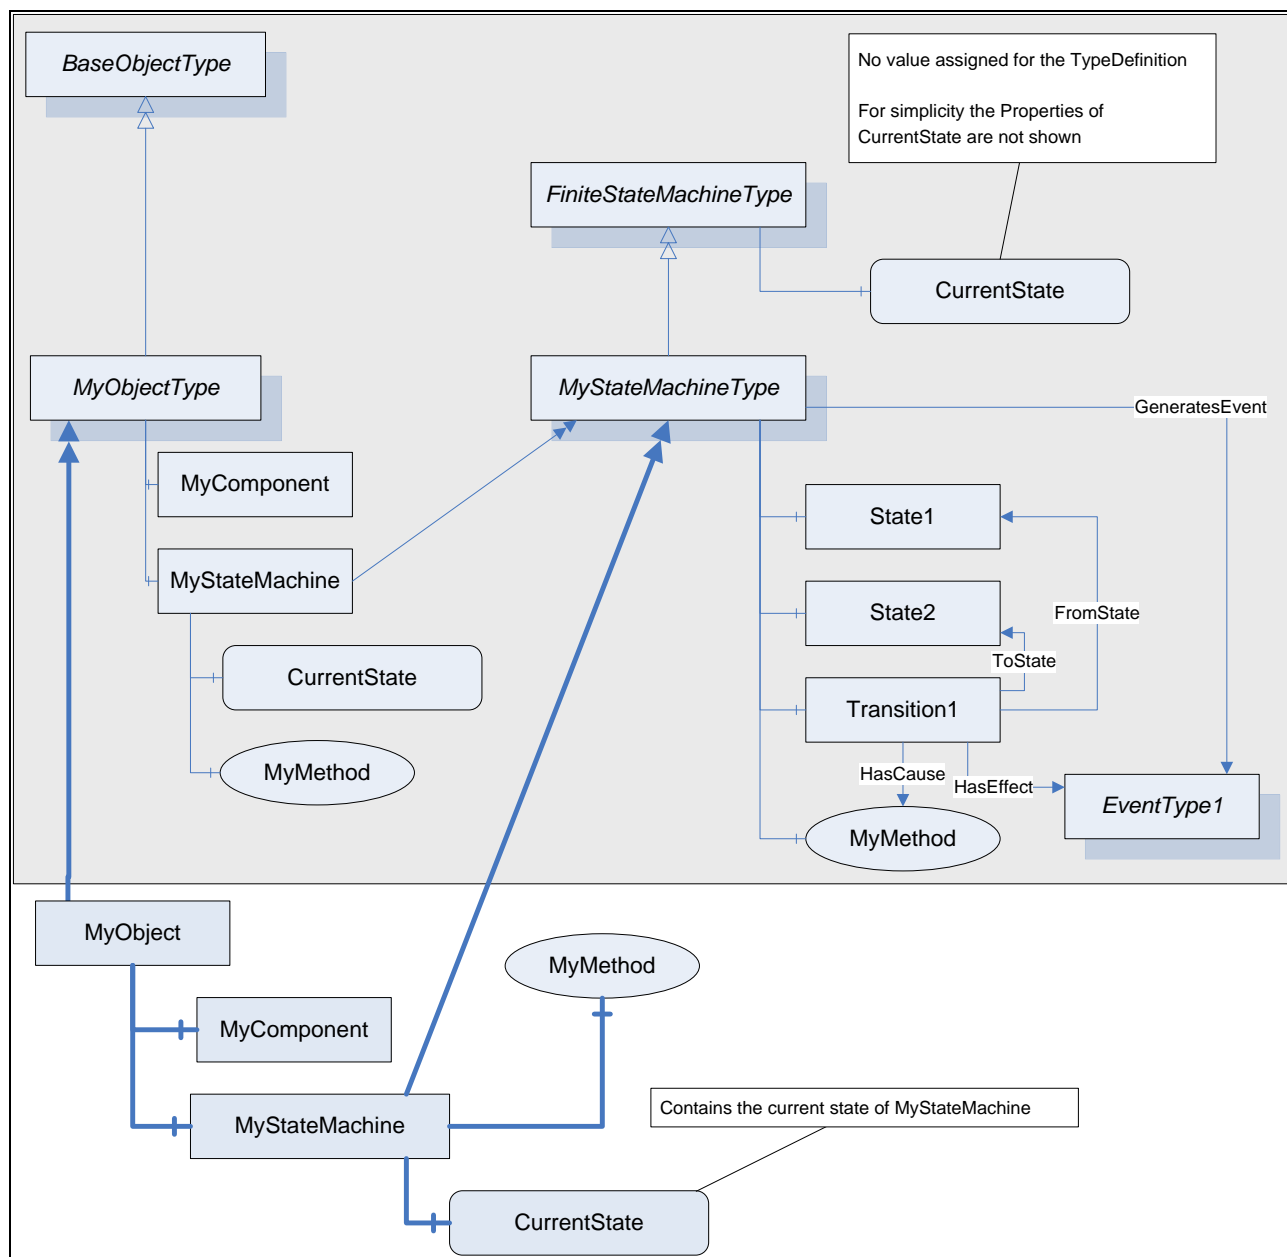


Figure 9 – Example of a StateMachineType using containment

Figure 9 gives an example of an *ObjectType* not only representing a *StateMachine* but also having some other functionality. The *ObjectType* "MyObjectType" has an *Object*

"MyComponent" representing this other functionality. But it also contains a *StateMachine* "MyStateMachine" of the type "MyStateMachineType". *Objects* of "MyObjectType" also contain such an *Object* representing the StateMachine and a *Variable* containing the current state of the StateMachine, as shown in the Figure.

4.5.4 Example of a StateMachine having Transition to SubStateMachine

The *StateMachines* shown so far only had *Transitions* between *States* on the same level, that is, on the same *StateMachine*. Of cause, it is possible and often required to have *Transitions* between *States* of the *StateMachine* and *States* of its *SubStateMachine*.

Because a *SubStateMachine* can be defined by another *StateMachineType* and this type can be used in several places, it is not possible to add a bi-directional *Reference* from one of the shared *States* of the *SubStateMachine* to another *StateMachine*. In this case it is suitable to expose the *FromState* or *ToState* *References* uni-directional, that is, only pointing from the *Transition* to the *State* and not being able to browse to the other direction. If a *Transition* points from a *State* of a *SubStateMachine* to a *State* of another sub-machine, both, the *FromState* and the *ToState* *Reference*, are handled uni-directional.

A Client shall be able to handle the information of a *StateMachine* if the *ToState* and *FromState* *References* are only exposed as forward *References* and the inverse *References* are omitted.

Figure 10 gives an example of a state machine having a transition from a sub-state to a state.

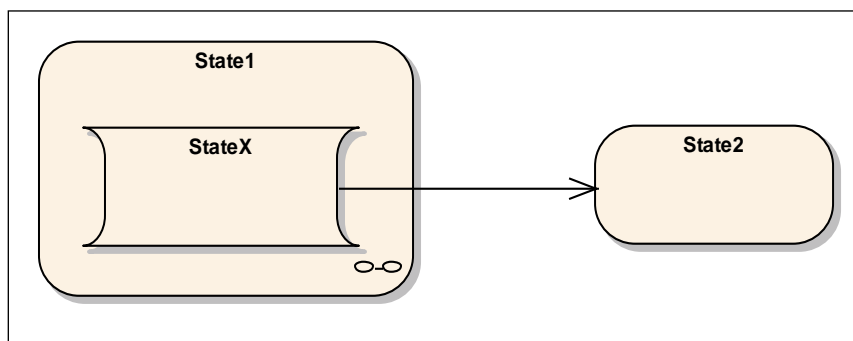


Figure 10 – Example of a StateMachine with Transitions from sub-states

In Figure 11 the representation of this example as *StateMachineType* in the *AddressSpace* is given. The "Transition1", part of the definition of "MyStateMachineType", points to the "StateX" of the *StateMachineType* "AnotherStateMachineType". The *Reference* is only exposed as forward *Reference* and the inverse *Reference* is omitted. Thus, there is no *Reference* from the "StateX" of "AnotherStateMachineType" to any part of "MyStateMachineType" and "AnotherStateMachineType" can be used in other places as well.

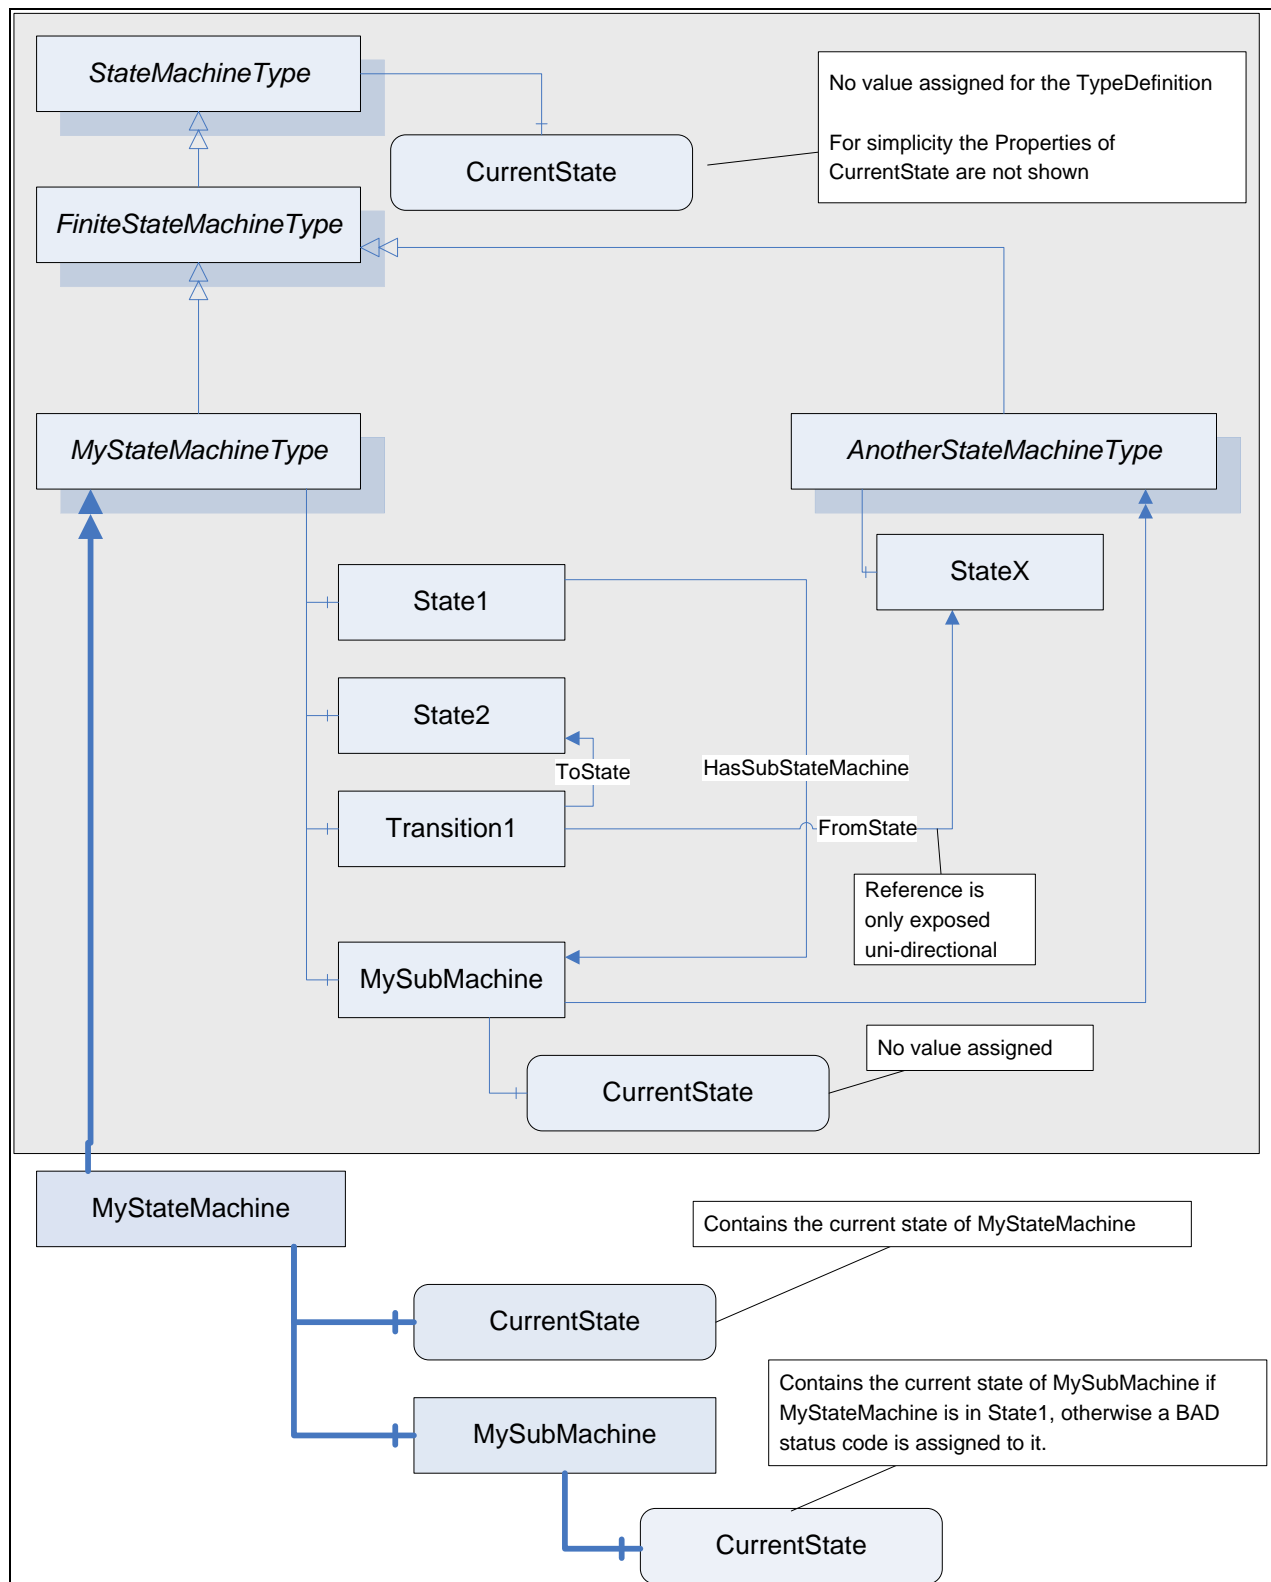


Figure 11 – Example of a StateMachineType having Transition to SubStateMachine

4.5.5 Example of a StateMachine adding a SubStateMachine on a Subtype

When a subtype of *FiniteStateMachineType* having *States* extends the *StateMachine*, it is not allowed to add additional *States*, but instead *SubStateMachines* can be added to existing *States*.

The example in Figure 12 shows a very simple *StateMachine* with two *States*.

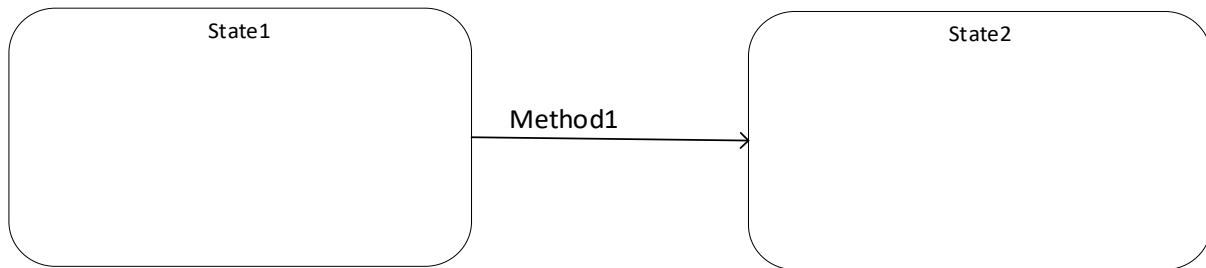


Figure 12 – Example of a StateMachine with two States

In Figure 13 the *StateMachine* of Figure 12 is extended by adding two substates to "State1".

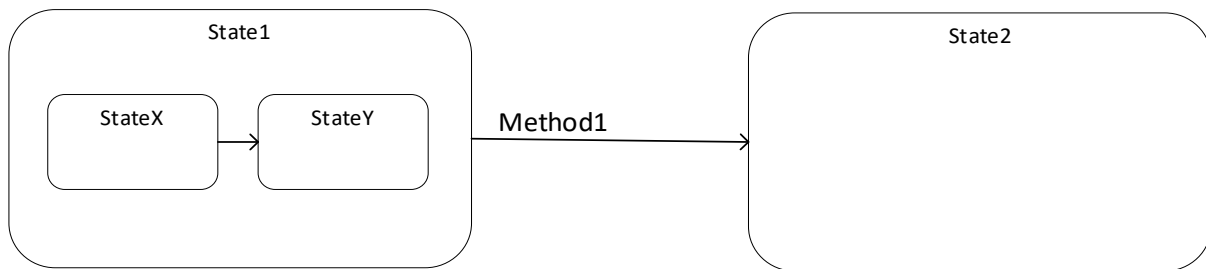


Figure 13 – Example of a StateMachine extended with two Substates

In Figure 14 the *StateMachine* of Figure 13 is extended by adding two substates to "State2", and an effect on the Transition between "State1" and "State2".

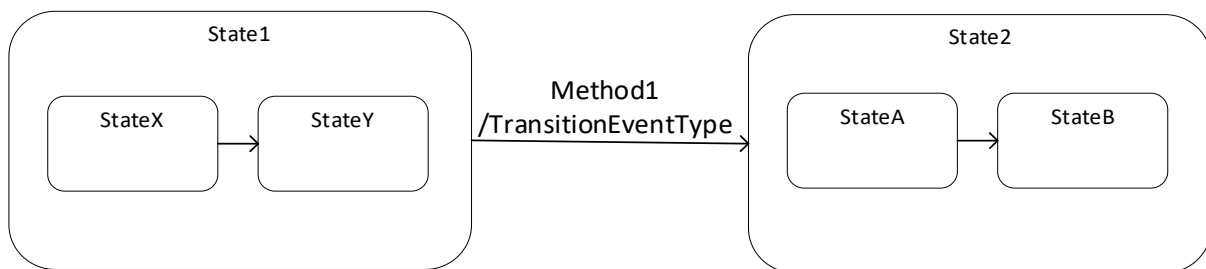


Figure 14 – Example of a StateMachine extended with another two Substates

In Figure 15 the representation of this example as *StateMachineType* in the *AddressSpace* is given. The "MyStateMachineType" defines the *StateMachine* of Figure 12, and the "MySubStateMachineType" is a subtype and extends the *StateMachine* with a *SubStateMachine* as defined in Figure 13. The "MySubSubStateMachineType" is another subtype as defined in Figure 14.

The States and Transitions of "MyStateMachineType" are replicated to "MySubStateMachineType" and "MySubSubStateMachineType". Since "Method1" is not overridden, the "Transition1" of all three types is referencing the Method of "MyStateMachineType". In "MySubStateMachineType", a *SubStateMachine* for "State1" was added, and in "MySubSubStateMachineType" a *SubStateMachine* for "State2". In addition, "MySubSubStateMachineType" adds an effect to "Transition1".

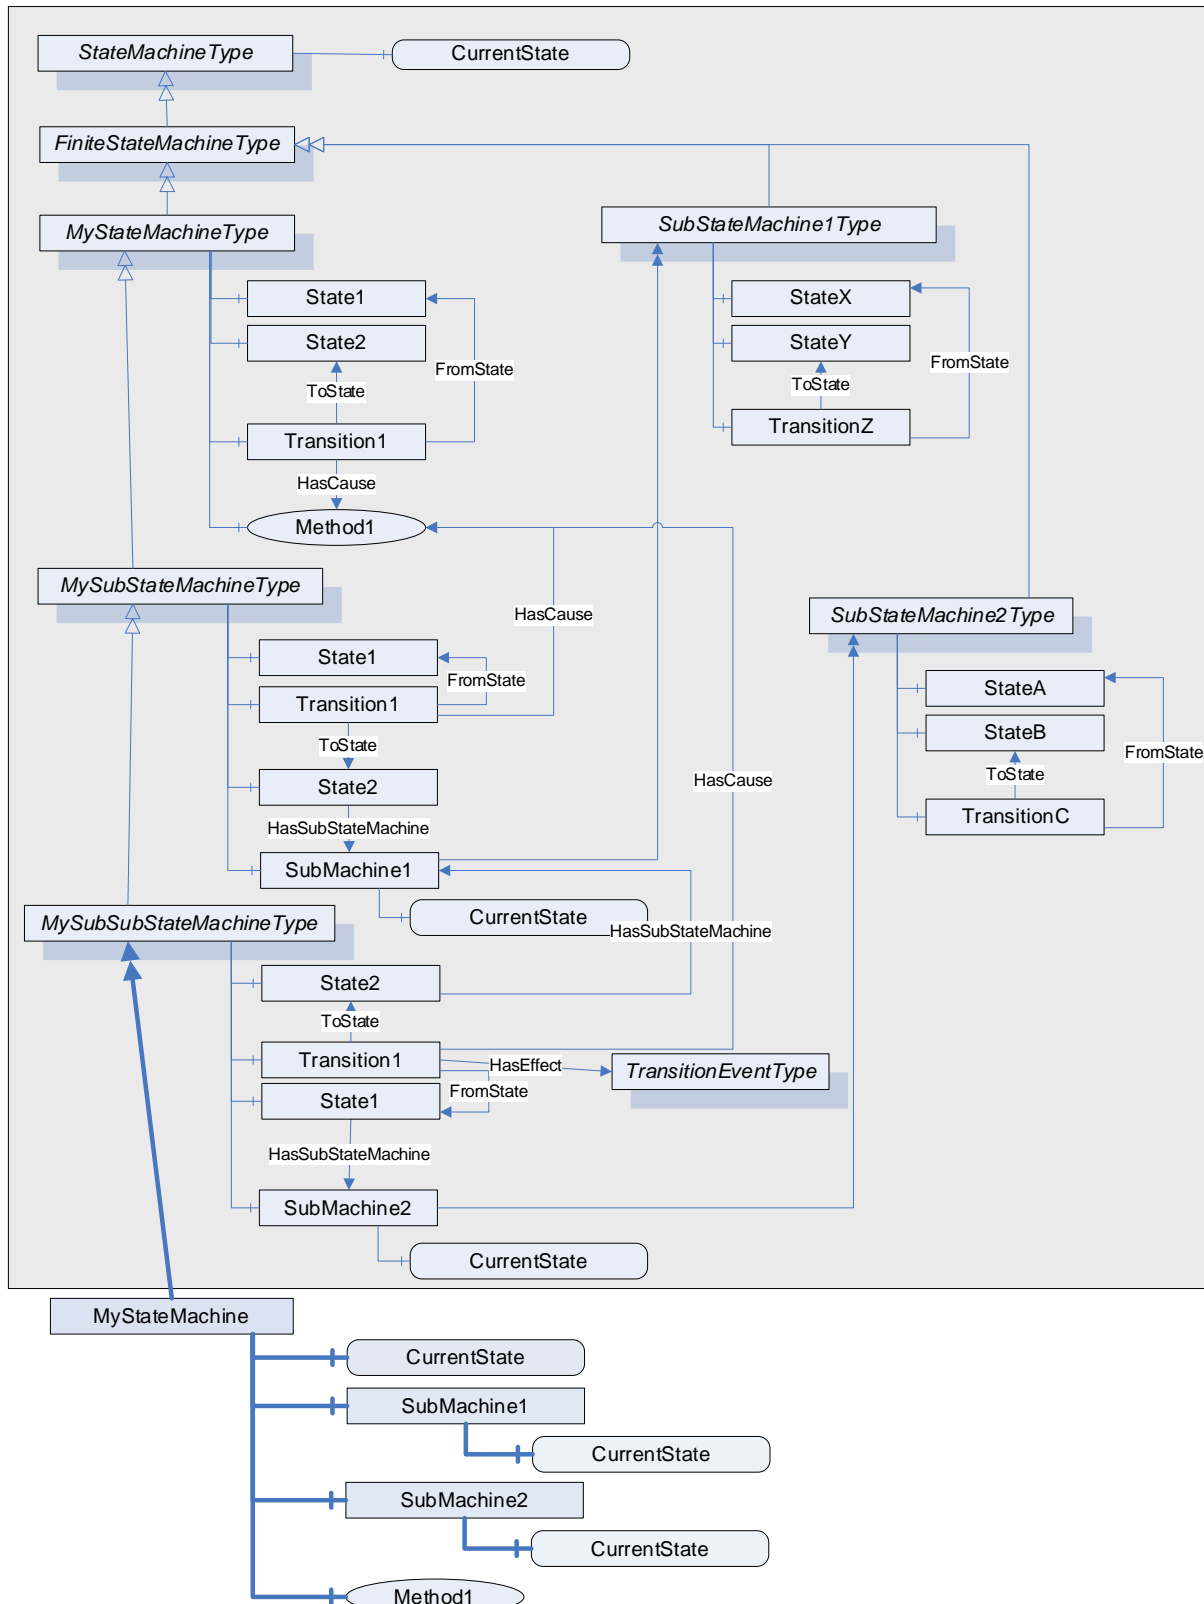


Figure 15 – Example of a *StateMachineType* adding *SubStateMachines* in Subtypes

4.6 StateMachine Extensions for ChoiceStates and Guards

4.6.1 Overview

This section describes extensions to the *StateMachine* model allowing choices and guards on *StateMachines*.

4.6.2 ChoiceStateType

The *ChoiceStateType* is a subtype of the *StateType* and is formally defined in Table 20. An *Object* of the *ChoiceStateType* represents a pseudo state that is directly exited when it is entered. The *Guards* defined on the *Transitions* from the *ChoiceState* determine which *Transition* is used. The *Guards* shall be defined in a way that at least one *Guard* is true and a *Transition* can be determined. If this is not the case, the *StateMachine* is non-well formed. To avoid this, the specific *ElseGuardVariableType* can be used, which is only "true" if all other *Guards* on a *ChoiceState* are "false". If several *Guards* are "true", only one of those *Transitions* is used. The algorithm to determine the *Transition* is server-specific.

A sample *StateMachine* using a *ChoiceState* is given in Figure 16. It provides a simplified representation of a robot. When the *StateMachine* is in the S1_Initial state, calling the Load() *Method* loads a program to the robot and triggers the *Transition* into the *ChoiceState* (CS). In the *ChoiceState* the *Guards* are validated and in case the robot is on the correct position for the loaded program (validated by the guard OnPath = True) the *State* S3_Ready is entered. In case the robot is not in the correct position (Else) the S2_Loaded *State* is entered. In that *State*, the Prepare() *Method* puts the robot in the correct position, and triggers the *Transition* to S3_Ready. If the robot is ready, it can be started. While it is running, it can be stopped. If the program is finished, the robot goes back to either the loaded or ready state, depending on its position, using the *ChoiceState*, again.

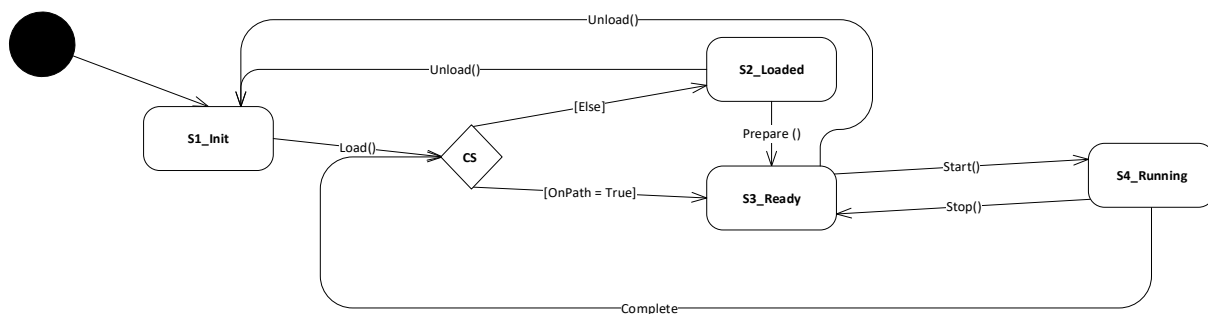


Figure 16 – Example of a ChoiceState

As the *ChoiceState* is directly exited after it is entered there shall be no trigger (using the *HasCause ReferenceType* or a subtype) defined on any leaving *Transition* (*Transitions* referencing the *ChoiceState* with the *FromState Reference* or a subtype).

Table 20 – ChoiceStateType

Attribute	Value				
BrowseName	ChoiceStateType				
IsAbstract	False				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the <i>StateType</i> defined in 4.4.9					
Conformance Units					
Base Info Choice States					

4.6.3 HasGuard

The *HasGuard ReferenceType* is a concrete *ReferenceType* and can be used directly. It is a subtype of *HasComponent*.

The semantic of this *ReferenceType* is to point from a *Transition* to a *Guard*. The *Guard* indicates if the *Transition* can be used or not (see *GuardVariableType*). A *Transition* can only be used, if the *Guard* is "True". A *Transition* can point to several *Guards*. In that case, all *Guards* need to be "True" before the *Transition* can be used. If there is no *Guard*, the *Transition* can always be used (considered as if all *Guards* are "True").

The *SourceNode* of this *ReferenceType* shall be an *Object* of the *ObjectType TransitionType* or one of its subtypes. The *TargetNode* shall be a *Variable* of the *VariableType GuardVariableType* or one of its subtypes.

The representation of the *HasGuard ReferenceType* in the *AddressSpace* is specified in Table 21.

Table 21 – HasGuard ReferenceType

Attribute	Value				
BrowseName	HasGuard				
InverseName	GuardOf				
Symmetric	False				
IsAbstract	False				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the HasComponent ReferenceType defined in OPC 10000-5					
Conformance Units					
Base Info Choice States					

4.6.4 GuardVariableType

The *GuardVariableType* provides the information of a *Guard* of a *Transition* in a *StateMachine*. A *Guard* indicates, if the *Transition* can be used or not. The *Guard* defines a semantic that can be evaluated to "True" or "False". Only if the semantic is "True", the *Transition* connected via a *HasGuard Reference* can be used. The value of the *GuardVariableType* provides the semantic of the *Guard* in a human-readable way, that can be used to display the *StateMachine*.

This base *GuardVariableType* does not define a machine-readable semantic of the *Guard*. The calculation, if the *Guard* is "True" or "False" is server-specific. Subtypes of this *VariableType* do define concrete machine-readable semantics.

The *GuardVariableType* is formally defined in Table 22.

Table 22 – GuardVariableType definition

Attribute	Value				
BrowseName	GuardVariableType				
DataType	LocalizedText				
ValueRank	-1 (-1 = Scalar)				
IsAbstract	False				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the BaseDataVariableType defined in OPC 10000-5					
HasSubtype	VariableType	ElseGuardVariableType	Defined in 4.6.6		
HasSubtype	VariableType	ExpressionGuardVariableType	Defined in 4.6.5		
Conformance Units					
Base Info Choice States					

4.6.5 ExpressionGuardVariableType

The *ExpressionGuardVariableType* provides, in addition to the human-readable semantic from its *GuardVariableType*, a machine interpretable representation on the semantic.

The *ExpressionGuardVariableType* is formally defined in Table 23.

Table 23 – ExpressionGuardVariableType definition

Attribute	Value				
BrowseName	ExpressionGuardVariableType				
DataType	LocalizedText				
ValueRank	-1 (-1 = Scalar)				
IsAbstract	False				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the GuardVariableType defined in 4.6.4					
HasProperty	Variable	Expression	ContentFilter	PropertyType	Mandatory
Conformance Units					
Base Info Choice States					

The mandatory *Property Expression* provides a *ContentFilter*, that shall be evaluated on the Object the *StateMachine* belongs to. This is a machine-readable semantic of the *Guard*. If the *ContentFilter* evaluates to "True", the *Guard* is "True", otherwise the *Guard* is "False".

The *ContentFilter* for *ExpressionGuardVariableType* is restricted to basic operators (see OPC 10000-4 for details).

The *ContentFilter* can reference any *Variables* defined on the *StateMachineType* and are validated on the instance of the *StateMachine*. If the definition of the *Variable* is not owned directly by the *StateMachine* but for example some other type, the *StateMachine* instance shall reference that *Variable*.

4.6.6 ElseGuardVariableType

The *ElseGuardVariableType* is a specialization of the *GuardVariableType* defining a concrete semantic for the *Guard*. The value of the *Guard* should always be {"en", "Else"} or a translation of this. The *ElseGuardVariableType* shall only be used on pseudo states like the *ChoiceStateType*. That means, that it shall only be referenced from *Transitions* having such a *StateType* as *SourceNode*. The *ElseGuardVariableType* shall only be used once for each *State*. That means, that each *State* shall at most have one *Transition* (referenced as *SourceNode*) referencing an *ElseGuardVariableType*. The *ElseGuardVariableType* shall be the only *Guard* of a *Transition*. That means, if a *Transition* references an instance of an *ElseGuardVariableType*, it shall not reference any other *Guards*.

The semantic of the *ElseGuardVariableType* is, that if a pseudo state is reached and no other *Transition* exists on the *State* where all its *Guards* are validated to "True", this *Guards* validates to "True" and thus its *Transition* is used.

The *ElseGuardVariableType* is formally defined in Table 24.

Table 24 – ElseGuardVariableType definition

Attribute	Value				
BrowseName	ElseGuardVariableType				
DataType	LocalizedText				
ValueRank	-1 (-1 = Scalar)				
IsAbstract	False				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the GuardVariableType defined in 4.6.4					
Conformance Units					
Base Info Choice States					

4.7 Example of a StateMachine using a ChoiceState and Guards

Taking the sample *StateMachine* of Figure 16 its representation in the OPC UA *AddressSpace* is shown in Figure 17 as *RobotStateMachineType*. The *Transition* T2 between the *ChoiceState* and S2_Loaded has the *Guard* "Else" of *ElseGuardVariableType* and the *Transition* T3 between the *ChoiceState* and S3_Ready has the *Guard* "OnPathTrue" having an "Expression" *Property* (not shown in the figure). The *ContentFilter* of the Expression references to the ProgramLoaded *Variable* of the *RobotStateMachineType*. When the *ChoiceState* is entered on an instance of the *RobotStateMachineType* like MyStateMachine in Figure 17, the concrete *Variable* of the

instance is used to evaluate the *ContentFilter*. The value of the Expression is in the sample an array with one entry, using the *FilterOperator* Equal_0 and the filterOperands are the SimpleOperand OnPath and the Literal value "True".

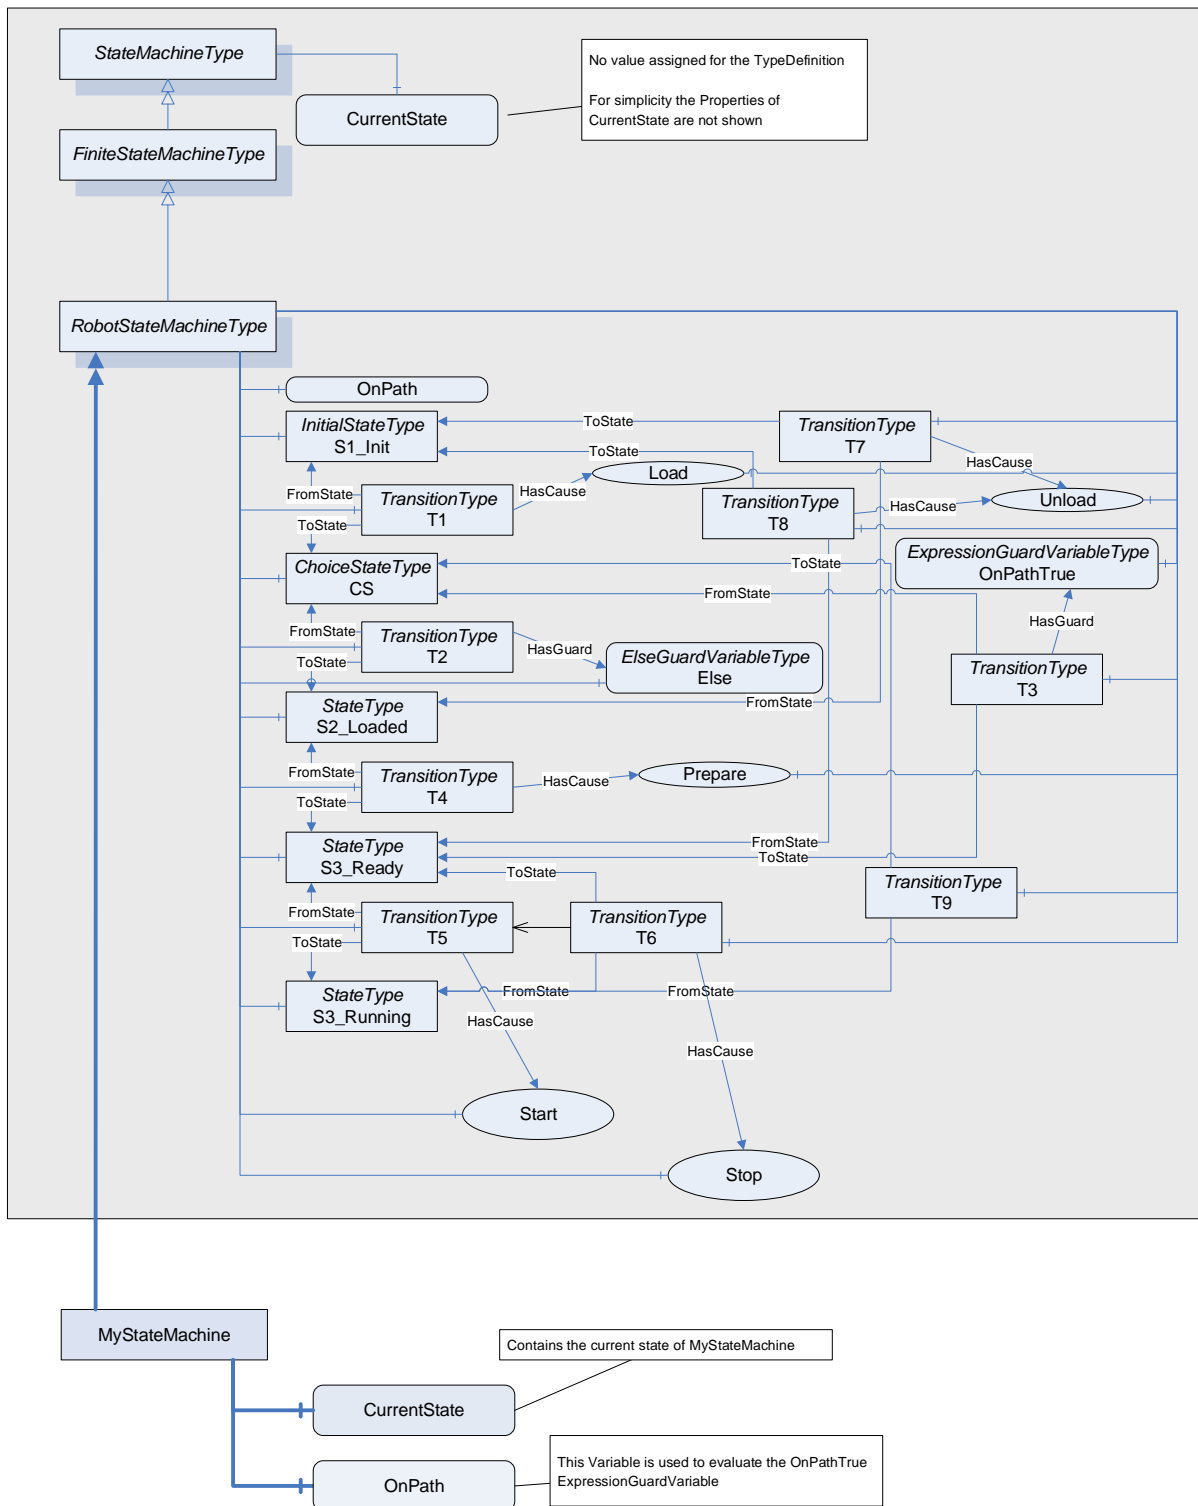


Figure 17 – Example of a StateMachine using ChoiceState and Guards